aiwa SERVICE

NSX-BL54 LH
NSX-AJ54 U

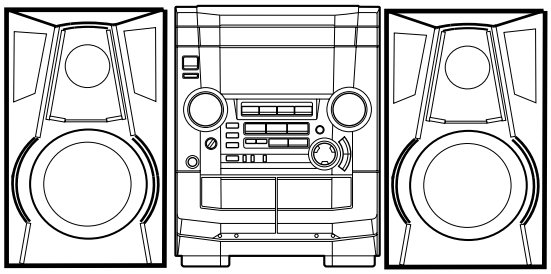

SERVICE MANUAL

COMPACT DISC
STEREO SYSTEM

BASIC TAPE MECHANISM : 2ZM-3MK2 YPR4NC(LH)
BASIC TAPE MECHANISM : ZZM-3 PR1NF(U)
BASIC CD MECHANISM : AZG-1 ZD8RDC(LH)
BASIC CD MECHANISM : AZG-1 YKZD8RDF(U)

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX–BL54	CX–NBL54	SX–WNBL53	RC–ZAS01
NSX–AJ54	CX–NAJ54	SX–WNAJ53	RC–ZAS02

This Service Manual is the "Revision Publishing" and replaces "Simple Manual" (S/M Code No. 09-002-429-5T1).

If requiring information about the CD mechanism, see Service Manual of AZG-1 ZD8RDC (S/M Code No. 09-001-335-3NA)/ AZG-1 YKZD8RDF (S/M Code No. 09-001-335-3N6).

aiwa

S/M Code No. 09-002-429-5R3

REVISION DATA

SPECIFICATIONS

Main unit CX-NBL54/CX-NAJ54

FM tuner section

Tuning range	87.5 MHz to 108 MHz
Usable sensitivity (IHF)	13.2 dBf
Antenna terminal	75 ohms (unbalanced)

AM tuner section

Tuning range	530 kHz to 1710 kHz (10 kHz step) 531 kHz to 1602 kHz (9 kHz step)
Usable sensitivity	350 μV/m
Antenna	Loop antenna

Amplifier section

Mid-high frequency amplifier

Power output	Rated: 20 W + 20 W (8 ohms, T.H.D. 1 %, 1 kHz) <LH> Reference : 25 W + 25 W (8 ohms, T.H.D. 10 %, 1 kHz) <LH> 20 W + 20 W (200 Hz - 20kHz, THD less than 1%, 8 ohms) <U>
Total harmonic distortion	0.1 % (10 W, 1 kHz, 8 ohms, DIN AUDIO)

Low frequency amplifier

Power output	Rated: 60 W + 60 W (6 ohms, T.H.D. 1 %, 130 Hz) <LH> Reference : 75 W + 75 W (6 ohms, T.H.D. 10 %, 130 Hz) <LH> 60 W + 60 W (50 Hz - 200 Hz, THD less than 1%, 6 ohms) <U>
Total harmonic distortion	0.1 % (30W, 130 Hz, 6 ohms, DIN AUDIO)
Inputs	VIDEO/AUX: 500 mV
MIC	1.0 mV (10 k ohms) <LH>
Outputs	SPEAKERS HIGH FREQ: accept speakers of 8 ohms or more SPEAKERS LOW FREQ: accept speakers of 6 ohms or more SURROUND SPEAKERS: accept speakers of 8 ohms to 16 ohms PHONES (stereo jack): accepts headphones of 32 ohms or more

Cassette deck section

Track format	4 tracks, 2 channels stereo
Frequency response	50 Hz – 15000 Hz
Recording system	AC bias
Heads	Deck 1: Playback head x 1 Deck 2: Recording/playback head x 1, erase head x 1

Compact disc player section

Laser	Semiconductor laser (λ = 780 nm)
D-A converter	1 bit dual
Signal-to-noise ratio	85 dB (1 kHz, 0 dB)
Harmonic distortion	0.05 % (1 kHz, 0 dB)
Wow and flutter	Unmeasurable

General

Power requirements	120 V/220 – 230 V/240 V AC, switchable 50/60 Hz <LH> 120 V AC, 60 Hz <U>
Power consumption	130 W <LH>, 110 W <U>
Power consumption in standby mode	If the power-economizing mode is ECO OFF: 20 W If the power-economizing mode is ECO ON or ECO AUTO: 0.9 W
Dimensions of main unit (W x H x D)	260 x 326 x 346 mm (10 $^{1}/_{4}$ x 12$^{7}/_{8}$ x 13$^{5}/_{8}$ in.)
Weight of main unit	9.0 kg <LH> 8.0 kg (17 lbs 10 oz.) <U>

Speaker system SX-WNBL53/SX-WNAJ53

Speaker system	3 way, Built-in subwoofer (magnetic shielded type)
Speaker units	Subwoofer: 160 mm (6$^{3}/_{8}$ in.) cone type Full range: 100 mm (4 in.)cone type Super tweeter: 20 mm ($^{13}/_{16}$ in.) ceramic type
Impedance	6 ohms/8 ohms
Sensitvity	87 dB/W/m
Dimensions (W x H x D)	230 x 324 x 282 mm (9$^{1}/_{8}$ x 12$^{7}/_{8}$ x 11$^{1}/_{8}$ in.)
Weight	4.8 kg (10 lbs 9 oz)

- Design and specifications are subject to change without notice.
- The word “BBE” and the “BBE symbol” are trademarks of BBE Sound, Inc.
- Under license from BBE Sound, Inc.

ACCESSORIES LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NFJ-902-010		IB,LH(ESP)B<LH>
1	8A-NFJ-913-010		IB,U(ESF)M<U>
2	8Z-NF8-702-010		RC UNIT,RC-ZAS01<LH>
2	8Z-NF9-702-010		RC UNIT,ZAS02<U>
3	87-006-268-010		ANT,LOOP AM<U>
3	87-A90-030-010		ANT,LOOP AM-NC C<LH>
4	87-043-115-010		FEEDER-ANT,FM
⚠ 5	87-A91-017-010		PLUG,CONVERSION JT-0476<LH>

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

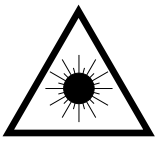

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynling laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

Precaution to replace Optical block

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in the figure below.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION

L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

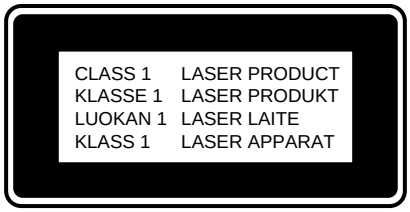

ZA3/ZA4 (KSS-213F) MODEL

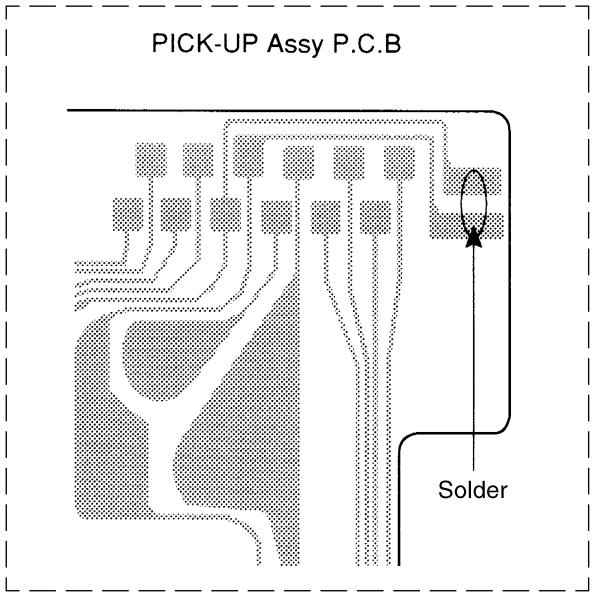

ZA8/ZD8 MODEL

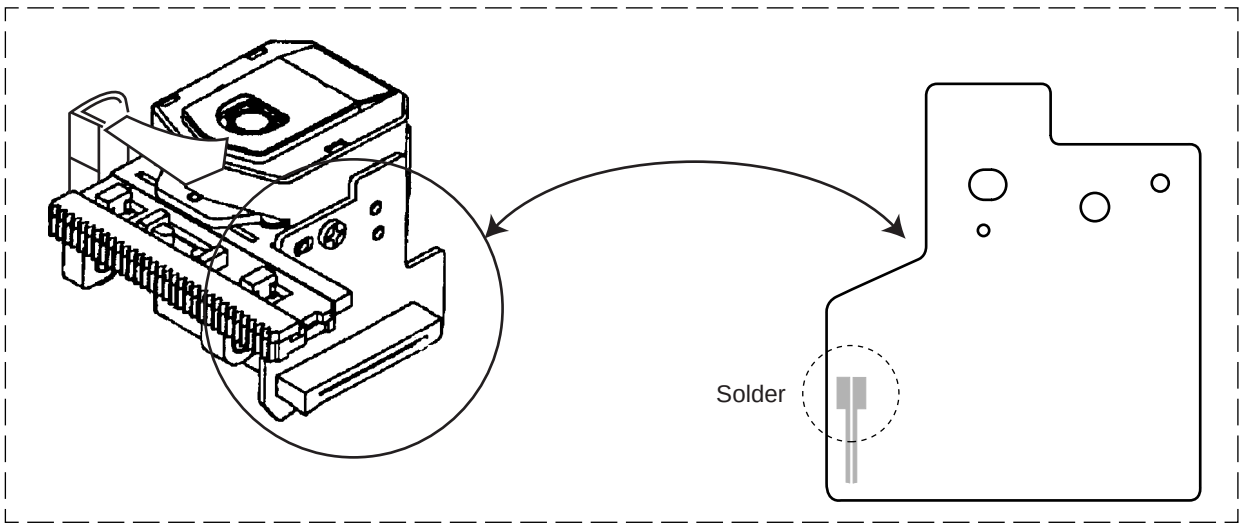

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, secondary defect can occur.
In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

① Remove the AC power cord.
② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
④ Contact the same end of the discharging resistor as step **3** to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
⑤ Check that voltage across C101 and C102 has decreased to 1 V or less using a multimeter or an oscilloscope.

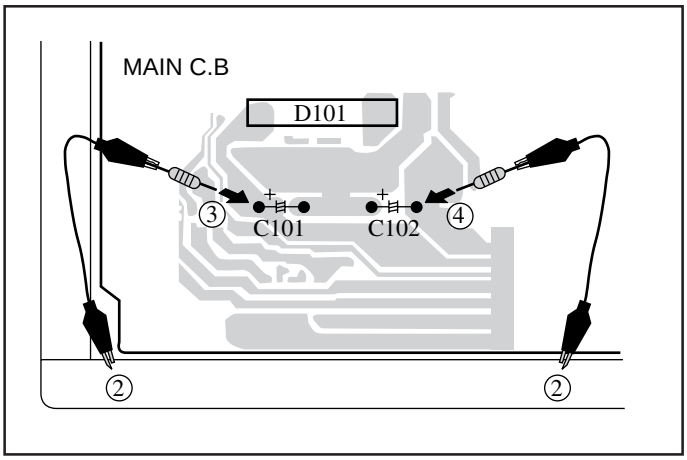

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.
When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgement of the MICROCOMPUTER

① Turn on the AC main power.
② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

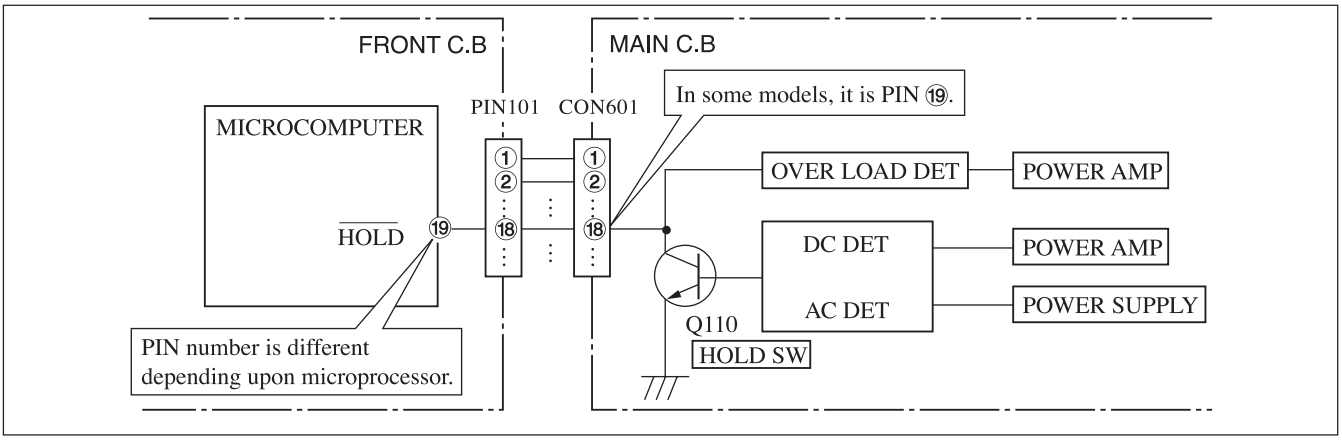

Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.
When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

① Remove the AC power cord.

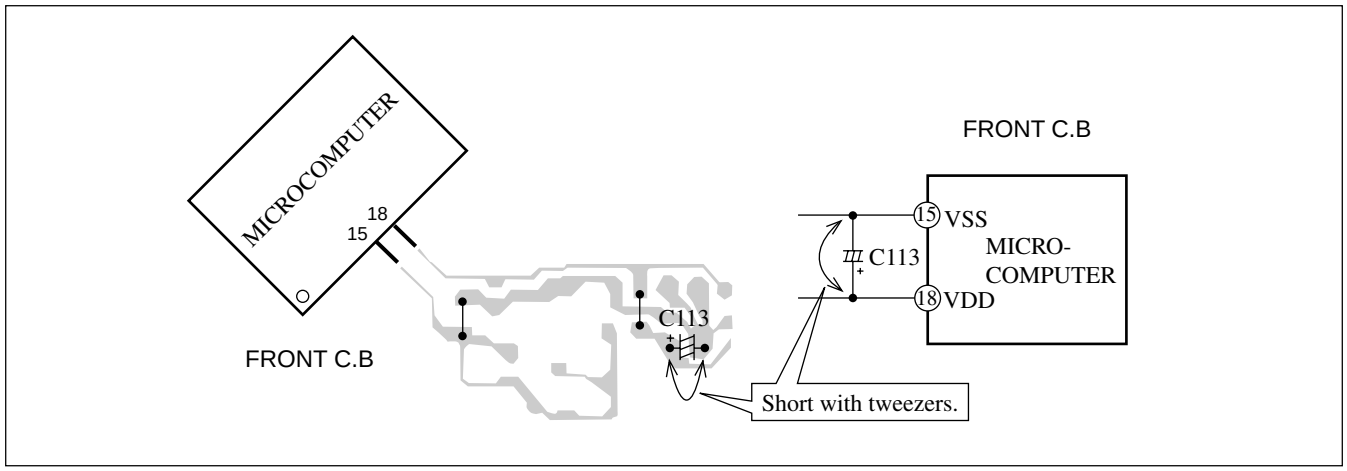

Fig-2-2

② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC			
	87-A21-269-010		IC,EW732<U>
	87-020-454-010		IC,DN6851<LH>
	87-A21-417-010		IC,STK490-310
	8A-NF8-612-110		C-IC,LC866548V-5P40
	87-A21-396-010		IC,STK490-040
	87-A21-629-010		IC,SPS-442-1-N
	87-A21-419-040		C-IC,NJM14558MD-TE2
	87-A21-023-040		C-IC,BA3835F
	87-070-289-040		C-IC,BU2092F
	87-A21-401-040		C-IC,M61503FP
	87-A21-415-010		IC,LA1843
	87-070-127-110		IC,LC72131D
TRANSISTOR			
	87-026-451-080		TR,2SA933S<LH>
	87-026-609-080		TR,KTA1266GR
	89-213-702-010		TR,2SB1370E
	87-026-610-080		TR,KTC3198GR
	87-A30-076-080		C-TR,2SC3052F
	87-A30-075-080		C-TR,2SA1235F
	87-026-245-080		TR,DTC114ES
	87-A30-198-080		TR,KTC3199GR
	87-A30-107-070		C-TR,CMBT5401
	87-A30-106-040		C-TR,CMBT5551
	87-A30-087-080		C-FET,2SK2158
	87-A30-074-080		C-TR,RT1P 141C
	87-A30-318-080		TR,CSA952K
	87-A30-091-080		FET,2SJ460
	87-A30-329-080		TR,CD1585BC
	87-A30-090-080		FET,2SK2541
	87-A30-104-080		C-TR,RT1N 441C
	87-A30-468-080		C-TR,KRC102S-RTK
	87-A30-484-080		C-TR,KRA102S<U>
	89-333-317-880		TR,2SC3331(T/U)
	87-A30-269-040		C-FET,2SJ461-T1
	89-327-143-080		C-TR,2SC2714O
	87-A30-489-080		C-TR,KRA107S
	87-A30-234-080		TR,CSC4115BC
DIODE			
	87-A40-393-090		DIODE,1N5402GW(F20)
	87-020-465-080		DIODE,1SS133
	87-A40-548-090		DIODE,D3SBA20<U>
	87-A40-547-090		DIODE,D5SBA20<LH>
	87-A40-455-080		DIODE,RL203 GW
	87-A40-553-080		DIODE,1N4003 LES
	87-A40-776-080		ZENER,UZ27BSD
	87-A40-764-080		ZENER,UZ10BSC
	87-A40-270-080		C-DIODE,MC2838
	87-A40-313-080		C-DIODE,MC2840
	87-A40-269-080		C-DIODE,MC2836
	87-A40-768-080		ZENER,UZ16BSA
	87-A40-752-080		ZENER,UZ6.2BSC
	87-A40-802-080		ZENER,UZ5.1BSC
	87-A40-739-080		ZENER,UZ2.7BSA
	87-017-149-080		ZENER,HZS6A2L
MAIN C.B			
C0003	87-012-368-080		C-CAP,S 0.1-50 Z F
C0004	87-012-368-080		C-CAP,S 0.1-50 Z F
C0005	87-012-368-080		C-CAP,S 0.1-50 Z F
C0006	87-012-368-080		C-CAP,S 0.1-50 Z F
C0009	87-012-368-080		C-CAP,S 0.1-50 Z F
C0010	87-012-368-080		C-CAP,S 0.1-50 Z F
C0011	87-012-368-080		C-CAP,S 0.1-50 Z F
C0012	87-012-368-080		C-CAP,S 0.1-50 Z F
C0015	87-012-368-080		C-CAP,S 0.1-50 Z F
C0016	87-012-368-080		C-CAP,S 0.1-50 Z F
C0017	87-012-368-080		C-CAP,S 0.1-50 Z F
C0018	87-012-368-080		C-CAP,S 0.1-50 Z F
C0019	87-016-520-000		CAP,E 3300-65 M SMG
C0020	87-016-520-000		CAP,E 3300-65 M SMG
C0021	87-016-051-000		CAP,E 2200-35 M SMG
C0022	87-016-051-000		CAP,E 2200-35 M SMG
C0023	87-016-658-000		CAP,E 4700-35 M SMG
C0024	87-016-658-000		CAP,E 4700-35 M SMG
C0025	87-010-408-080		CAP,E 47-50 M 11L SME
C0026	87-010-247-080		CAP,E 100-50 M SME
C0030	87-010-430-080		CAP,E 100-63
C0031	87-010-263-080		CAP,E 100-10 M 11L SME
C0032	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0033	87-010-263-080		CAP,E 100-10 M 11L SME<U>
C0034	87-010-260-080		CAP,E 47-25 M 11L SME
C0035	87-010-380-080		CAP,E 47-16 M 11L SME
C0036	87-010-381-080		CAP,E 330-16 M SME
C0038	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0060	87-010-403-080		CAP,E 3.3-50 M 11L SME
C0061	87-010-260-080		CAP,E 47-25 M 11L SME
C0101	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0102	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0103	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0104	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0107	87-010-405-080		CAP,E 10-50 M 11L SME
C0108	87-010-405-080		CAP,E 10-50 M 11L SME
C0111	87-010-405-080		CAP,E 10-50 M 11L SME
C0112	87-010-405-080		CAP,E 10-50 M 11L SME
C0113	87-010-866-080		CAP,E 10-63 M VX
C0114	87-010-866-080		CAP,E 10-63 M VX
C0119	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0120	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0125	87-012-368-080		C-CAP,S 0.1-50 Z F
C0126	87-012-368-080		C-CAP,S 0.1-50 Z F
C0127	87-012-368-080		C-CAP,S 0.1-50 Z F
C0128	87-012-368-080		C-CAP,S 0.1-50 Z F
C0133	87-010-186-080		C-CAP,S 4700P-50 K B C2012
C0140	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0141	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0203	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0204	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0205	87-012-140-080		C-CAP,S 470P-50 J CH
C0206	87-012-140-080		C-CAP,S 470P-50 J CH
C0209	87-010-402-080		CAP,E 2.2-50 M 11L SME
C0210	87-010-402-080		CAP,E 2.2-50 M 11L SME
C0211	87-010-184-080		C-CAP,S 3300P-50 K B C2012
C0212	87-010-184-080		C-CAP,S 3300P-50 K B C2012
C0213	87-010-402-080		CAP,E 2.2-50 M 11L SME
C0214	87-010-402-080		CAP,E 2.2-50 M 11L SME
C0217	87-010-405-080		CAP,E 10-50 M 11L SME
C0218	87-010-405-080		CAP,E 10-50 M 11L SME
C0220	87-010-405-080		CAP,E 10-50 M 11L SME
C0223	87-010-190-080		C-CAP,S 0.01-50 Z F C2012
C0224	87-010-190-080		C-CAP,S 0.01-50 Z F C2012
C0228	87-010-405-080		CAP,E 10-50 M 11L SME
C0229	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0230	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0231	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0232	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0239	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0301	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0302	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0303	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0304	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0307	87-010-263-080		CAP,E 100-10 M 11L SME
C0308	87-010-263-080		CAP,E 100-10 M 11L SME

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C0309	87-010-318-080		C-CAP,S 47P-50 J CH GRM
C0310	87-010-318-080		C-CAP,S 47P-50 J CH GRM
C0313	87-010-188-080		C-CAP,S 6800P-50 K B C2012
C0314	87-010-188-080		C-CAP,S 6800P-50 K B C2012
C0315	87-010-263-080		CAP,E 100-10 M 11L SME
C0317	87-010-546-080		CAP,E 0.33-50 M 11L SME
C0318	87-010-546-080		CAP,E 0.33-50 M 11L SME
C0326	87-010-198-080		C-CAP,S 0.022-25 K B C2012
C0327	87-012-368-080		C-CAP,S 0.1-50 Z F
C0360	87-010-401-080		CAP,E 1-50 M 11L SME
C0399	87-012-140-080		C-CAP,S 470P-50 J CH
C0401	87-010-544-080		CAP,E 0.1-50 M 11L SME
C0402	87-010-544-080		CAP,E 0.1-50 M 11L SME
C0403	87-010-321-080		C-CAP,S 82P-50 J CH
C0404	87-010-321-080		C-CAP,S 82P-50 J CH
C0405	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0406	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0407	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0408	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0409	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0410	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0411	87-010-405-080		CAP,E 10-50 M 11L SME
C0412	87-010-405-080		CAP,E 10-50 M 11L SME
C0452	87-010-382-080		CAP,E 22-25 M 11L SME
C0453	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0454	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0455	87-010-183-080		C-CAP,S 2700P-50 K B GRM
C0456	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0458	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0459	87-010-175-080		C-CAP,S 560P-50 J SL
C0460	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0461	87-012-158-080		C-CAP,S 390P-50 J CH GRM
C0462	87-012-158-080		C-CAP,S 390P-50 J CH GRM
C0507	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0508	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0509	87-A10-300-080		CAP,M 0.027-50 J
C0510	87-A10-300-080		CAP,M 0.027-50 J
C0515	87-A10-300-080		CAP,M 0.027-50 J
C0516	87-A10-300-080		CAP,M 0.027-50 J
C0518	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0519	87-010-401-080		CAP,E 1-50 M 11L SME
C0520	87-010-401-080		CAP,E 1-50 M 11L SME
C0521	87-010-546-080		CAP,E 0.33-50 M 11L SME
C0522	87-010-546-080		CAP,E 0.33-50 M 11L SME
C0523	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0524	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0525	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0526	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0605	87-010-179-080		C-CAP,S 1200P-50 K B GRM
C0606	87-010-179-080		C-CAP,S 1200P-50 K B GRM
C0609	87-010-213-080		C-CAP,S 0.015-25 K B GRM
C0610	87-010-213-080		C-CAP,S 0.015-25 K B GRM
C0611	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0612	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0613	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0614	87-010-545-080		CAP,E 0.22-50 M 11L SME
C0615	87-010-154-080		C-CAP,S 10P-50 D CH GRM
C0616	87-010-385-080		CAP,E 220-25 M SME
C0617	87-010-385-080		CAP,E 220-25 M SME
C0618	87-010-405-080		CAP,E 10-50 M 11L SME
C0620	87-010-263-080		CAP,E 100-10 M 11L SME
C0630	87-016-669-080		C-CAP,S 0.1-25 K B
C0631	87-010-185-080		C-CAP,S 3900P-50 K B
C0632	87-010-185-080		C-CAP,S 3900P-50 K B
C0633	87-016-369-080		C-CAP,S 0.033-25 K B GRM
C0634	87-016-369-080		C-CAP,S 0.033-25 K B GRM
C0661	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0662	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0671	87-010-196-080		C-CAP,S 0.1-25 Z F C2012<LH>
C0672	87-010-196-080		C-CAP,S 0.1-25 Z F C2012<LH>
C0673	87-010-182-080		C-CAP,S 2200P-50 K B C2012<LH>
C0677	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0771	87-010-263-080		CAP,E 100-10 M 11L SME
C0772	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0782	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0783	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0784	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0785	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0786	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0788	87-010-149-080		C-CAP,S 5P-50 C CH GRM
C0789	87-A12-052-080		C-CAP,S 0.033-25 J B
C0790	87-A12-052-080		C-CAP,S 0.033-25 J B
C0791	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0792	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0793	87-010-404-080		CAP,E 4.7-50 M 11L SME
C0795	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0796	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0797	87-010-405-080		CAP,E 10-50 M 11L SME
C0798	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0799	87-010-407-080		CAP,E 33-50 M 11L SME
C0800	87-012-369-080		C-CAP,S 0.047-50 Z F
C0801	87-010-403-080		CAP,E 3.3-50 M 11L SME
C0802	87-010-194-080		C-CAP,S 0.047-25 Z F
C0803	87-010-198-080		C-CAP,S 0.022-25 K B C2012
C0804	87-010-263-080		CAP,E 100-10 M 11L SME
C0807	87-010-400-080		CAP,E 0.47-50 M 11L SME
C0808	87-010-401-080		CAP,E 1-50 M 11L SME
C0809	87-010-401-080		CAP,E 1-50 M 11L SME
C0810	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0814	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0815	87-010-400-080		CAP,E 0.47-50 M 11L SME
C0816	87-010-400-080		CAP,E 0.47-50 M 11L SME
C0821	87-010-405-080		CAP,E 10-50 M 11L SME
C0823	87-010-177-080		C-CAP,S 820P-50 J SL C2012
C0824	87-010-405-080		CAP,E 10-50 M 11L SME
C0825	87-010-596-080		C-CAP,S 0.047-16 K R C2012
C0842	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0844	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0850	87-010-260-080		CAP,E 47-25 M 11L SME
C0851	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0852	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0853	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0858	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0859	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0860	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0959	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0960	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0961	87-010-152-080		C-CAP,S 8P-50 D CH GRM
C0963	87-015-785-080		C-CAP, 0.1-25 Z F C3216
C0971	87-010-381-080		CAP,E 330-16 M SME
C0972	87-010-404-080		CAP,E 4.7-50 M 11L SME
C0973	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0974	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0979	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0981	87-010-260-080		CAP,E 47-25 M 11L SME
C0982	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0983	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0984	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0987	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0991	87-010-312-080		C-CAP,S 15P-50 J CH GRM
C0992	87-010-312-080		C-CAP,S 15P-50 J CH GRM
C0993	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0995	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0997	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0998	87-010-260-080		CAP,E 47-25 M 11L SME
C0999	87-A11-132-080		CAP,TC U 0.01-50 K B
CF0831	87-008-261-010		FLTR,CF SFE10.7MA5
CF0832	87-008-261-010		FLTR,CF SFE10.7MA5
CN0301	87-A60-620-010		CONN,3P V 2MM JMT
CN0351	87-A60-625-010		CONN,8P V 2MM JMT

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
CN0601	87-099-719-010		CONN,30P H BLK TYK-B(X)
CN0602	87-A60-131-010		CONN,6P V FE
CNA0001	8A-NF8-654-010		CONN ASSY,11P TID-A(480)
FFC602	88-906-251-110		FF-CABLE,6P 1.25
FFE0831	A8-8ZA-191-030		8ZA-1 YFEUNM<U>
FFE0831	A8-8ZA-193-070		8ZA-1 YFEUNC<LH>
J0201	87-A60-483-010		JACK,DIA6.3 BLK ST W/S KM
J0203	87-A60-238-010		TERMINAL,SP 4P (MSC)
J0204	87-A61-153-010		JACK,PIN 4P R/W(BL) (SEPA) KM<U>
J0205	87-A61-157-010		JACK,PIN 2P R/W/BL V(SEPA) KM<LH>
J0602	87-A60-881-010		JACK,PIN 2P MSP 242V05 PBSN
J0831	87-A60-202-010		TERMINAL,ANT 4P MSP-154V-02
L0101	87-003-383-010		COIL,1UH K
L0102	87-003-383-010		COIL,1UH K
L0201	87-003-383-010		COIL,1UH K
L0202	87-003-383-010		COIL,1UH K
L0451	87-007-342-010		COIL,OSC 85KHZ BIAS
L0801	87-A50-540-010		COIL,FM DET(TOK)
L0802	87-A91-551-010		FLTR,PCFJZH-450 L(TOK)
L0811	87-005-847-080		COIL,2.2UH K CECS
L0832	87-005-847-080		COIL,2.2UH K CECS
L0951	8A-NF8-667-010		COIL,AM PACK 4(TOK)
R0129	87-A00-257-080		RES,M/F 0.15-1W J
R0130	87-A00-257-080		RES,M/F 0.15-1W J
R0143	87-A00-439-050		RES,180-1/2W J RP<U>
R0143	87-A00-440-050		RES,220-1/2W J RP<LH>
R0144	87-A00-439-050		RES,180-1/2W J RP<U>
R0144	87-A00-440-050		RES,220-1/2W J RP<LH>
R0145	87-A00-439-050		RES,180-1/2W J RP<U>
R0145	87-A00-440-050		RES,220-1/2W J RP<LH>
R0146	87-A00-439-050		RES,180-1/2W J RP<U>
R0146	87-A00-440-050		RES,220-1/2W J RP<LH>
R0233	87-A00-258-080		RES,M/F 0.22-1W J
R0234	87-A00-258-080		RES,M/F 0.22-1W J
R0790	87-010-197-080		C-CAP,S 0.01-25 K B C2012
R0991	87-010-322-080		C-CAP,S 100P-50 J CH GRM
R0993	87-010-322-080		C-CAP,S 100P-50 J CH GRM
R0995	87-010-322-080		C-CAP,S 100P-50 J CH GRM
SFR0451	87-A90-432-080		SFR,30K H NVZ6TLTA
SFR0452	87-A90-432-080		SFR,30K H NVZ6TLTA
WH0001	87-A91-179-010		HLDR,WIRE 2.5-11P
X0991	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309

FRONT C.B

C0201	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0202	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0203	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0204	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0205	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0206	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0207	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0208	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0209	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0210	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0211	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0251	87-010-405-040		CAP,E 10-50 M 11L SME
C0253	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0254	87-012-369-080		C-CAP,S 0.047-50 Z F
C0255	87-010-560-040		CAP,E 10-50 M 5L MA
C0256	87-010-405-040		CAP,E 10-50 M 11L SME
C0259	87-010-405-040		CAP,E 10-50 M 11L SME
C0264	87-A11-148-080		CAP,TC U 0.1-50 Z F
C0273	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0274	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0301	87-010-182-080		C-CAP,S 2200P-50 K B C2012
C0302	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0303	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0312	87-010-498-040		CAP,E 10-16 M 5L SRE
C0314	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0315	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0316	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0321	87-012-393-080		C-CAP,S 0.22-16 K W5R CM/CB
C0322	87-010-400-040		CAP,E 0.47-50 M 11L SME
C0325	87-A10-189-040		CAP,E 220-10 M 5L
C0326	87-A10-189-040		CAP,E 220-10 M 5L
C0332	87-010-178-080		C-CAP,S 1000P-50 K B C2012
C0334	87-010-312-080		C-CAP,S 15P-50 J CH GRM
C0335	87-012-140-080		C-CAP,S 470P-50 J CH
C0336	87-012-155-080		C-CAP,S 180P-50 J CH GRM
C0339	87-012-156-080		C-CAP,S 220P-50 J CH GRM
C0340	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0341	87-010-194-080		C-CAP,S 0.047-25 Z F
C0351	87-010-981-040		CAP,E 22-35 M 5L SRE
C0401	87-010-197-080		C-CAP,S 0.01-25 K B C2012
C0451	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0452	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0453	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0454	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0455	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0502	87-010-186-080		C-CAP,S 4700P-50 K B C2012<LH>
C0503	87-010-112-040		CAP,E 100-16 M 11L SME<LH>
C0504	87-010-405-040		CAP,E 10-50 M 11L SME<LH>
C0505	87-010-545-040		CAP,E 0.22-50 M 11L SME<LH>
C0506	87-010-320-080		C-CAP,S 68P-50 J CH GRM<LH>
C0507	87-010-544-040		CAP,E 0.1-50 M 11L SME<LH>
C0508	87-010-544-040		CAP,E 0.1-50 M 11L SME<LH>
C0510	87-010-322-080		C-CAP,S 100P-50 J CH GRM<LH>
C0511	87-010-265-040		CAP,E 33-16 M 11L SME<LH>
C0512	87-010-178-080		C-CAP,S 1000P-50 K B C2012<LH>
C0513	87-010-196-080		C-CAP,S 0.1-25 Z F C2012<LH>
C0515	87-010-178-080		C-CAP,S 1000P-50 K B C2012<LH>
C0602	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0603	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0604	87-010-322-080		C-CAP,S 100P-50 J CH GRM
C0650	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
C0699	87-010-196-080		C-CAP,S 0.1-25 Z F C2012
CN0101	87-099-720-010		CONN,30P BLK TYK-B(P)
CN0102	87-099-015-010		CONN,13P V BLK 6216
CN0301	87-A60-140-010		CONN,15P V FE<LH>
CN0302	87-A60-136-010		CONN,11P V FE<U>
FB0301	87-008-372-080		FLTR,EMI BL01 RN1
FB0501	87-008-372-080		FLTR,EMI BL01 RN1<LH>
FFC102	88-913-301-110		FF-CABLE,13P-1.25
FFC105	88-911-101-110		FF-CABLE,11P 1.25<U>
FFC105	88-915-101-110		FF-CABLE, 15P 1.25 100MM<LH>
FL0401	8A-NF8-601-010		FL,HNA-11MM30(ANF-8)
J0501	87-A61-242-010		JACK,6.3 BLK MONO W/SW V KM<LH>
L0331	87-A50-408-010		COIL,OSC 5.76MHZ
LED0311	87-A40-589-040		LED,SLR-56VCT31 RED
LED0601	87-A40-803-010		LED,SELU1E10CXM-S LF38 BLUE
LED0602	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
LED0603	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
LED0604	87-A40-619-080		LED,SLR-56PT-TE7-W GRN<LH>
LED0605	87-A40-619-080		LED,SLR-56PT-TE7-W GRN<U>
LED0606	87-A40-619-080		LED,SLR-56PT-TE7-W GRN<LH>
LED0607	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
LED0608	87-A40-619-080		LED,SLR-56PT-TE7-W GRN
S0401	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0401	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0402	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0402	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0403	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0403	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0404	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0404	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0405	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0405	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0406	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0406	87-A91-024-180		SW,TACT KSHG611BT<LH>

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
S0407	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0407	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0408	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0408	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0409	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0409	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0410	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0410	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0411	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0411	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0412	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0413	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0413	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0414	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0414	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0415	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0415	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0416	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0416	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0417	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0417	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0418	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0418	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0419	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0419	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0420	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0425	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0425	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0426	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0426	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0432	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0432	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0433	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0433	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0434	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0434	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0435	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0435	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0436	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0436	87-A91-024-180		SW,TACT KSHG611BT<LH>
S0437	87-A90-095-080		SW,TACT EVQ11G04M<U>
S0437	87-A91-024-180		SW,TACT KSHG611BT<LH>
SW0252	87-A91-555-010		SW,RTRY EC12E24504
SW0253	87-A91-542-010		SW,RTRY EC12E12504
VR0501	86-NFA-607-010		VR,RTRY 10K15AX1 1 V XV0121PVN<LH>

DECK C.B

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
CON105	87-099-753-010		CONN,11P 9604 S F<U>
CON105	87-099-756-010		CONN,15P 9604 S F<LH>
SFR1	87-024-581-010		SFR,3.3K DIA 6H
SOL1	82-ZM1-618-410		SOL ASSY,27
SOL2	82-ZM1-618-410		SOL ASSY,27
SW1	87-A90-673-010		SW,MICRO ESE11SH1C<U>
SW1	87-A90-248-010		SW,MICRO ESE11SH2CXQ<LH>
SW2	87-A91-500-010		SW,MICRO MPU11470MLB0<U>
SW2	87-A90-248-010		SW,MICRO ESE11SH2CXQ<LH>
SW3	87-A91-500-010		SW,MICRO MPU11470MLB0<U>
SW3	87-A90-248-010		SW,MICRO ESE11SH2CXQ<LH>
SW4	87-A91-500-010		SW,MICRO MPU11470MLB0<U>
SW4	87-036-110-010		SW,MICRO SPPB62<LH>
SW5	87-A90-673-010		SW,MICRO ESE11SH1C<U>
SW5	87-036-110-010		SW,MICRO SPPB62<LH>
SW6	87-036-110-010		SW,MICRO SPPB62<LH>
SW8	87-A90-248-010		SW,MICRO ESE11SH2CXQ<LH>
SW9	87-A90-248-010		SW,MICRO ESE11SH2CXQ<LH>
W1	82-ZM3-601-010		RBN,CORD,4P-75<LH>
HEAD-1 C.B<LH>			
	85-ZM3-602-010		PWB,FLEX A<LH>
CON301	87-NF6-615-010		CONN ASSY,3P PB<LH>
HEAD-2 C.B<LH>			
	85-ZM3-602-010		PWB,FLEX A<LH>
CON351	87-NF6-616-010		CONN ASSY,8P-RPB<LH>
PT C.B			
C0001	87-010-387-080		CAP,E 470-25 M SME
C0031	87-010-403-040		CAP,E 3.3-50 M 11L SME
CN0001	87-A61-122-010		CONN,11P V TID-A
⚠PT0001	8A-NF8-604-010		PT,ANF-8 U<U>
⚠PT0001	8A-NF8-605-010		PT,ANF-8 LH<LH>
⚠PT0002	8A-NF8-661-010		PT,SUB ANF-8 (U)<U>
⚠PT0002	8A-NF8-673-010		PT,SUB ANF-8 (H)KAMI<LH>
⚠RY0001	87-A91-339-010		RELAY,AC DC12V G5PA-2<LH>
⚠RY0002	87-A91-418-010		RELAY,AC12V G5PA-1-M<U>
⚠S0001	87-A90-165-010		SW,SL 1-2-3 SWS2301<LH>
⚠T0001	87-A60-317-010		TERMINAL, 1P MSC
⚠T0002	87-A60-317-010		TERMINAL, 1P MSC

○チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

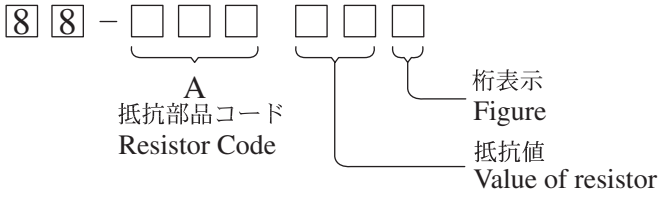

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm) 外形／Form	L	W	t	抵抗コード : A Resistor Code : A
1/16W	1005	± 5%	CJ		1.0	0.5	0.35	104
1/16W	1608	± 5%	CJ		1.6	0.8	0.45	108
1/10W	2125	± 5%	CJ		2	1.25	0.45	118
1/8W	3216	± 5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION

2SC3331
CD1585
CSA952
CSC4115
KTA1266
KTC3198



2SA933S
DTC114ES
KTC3199



2SB1370

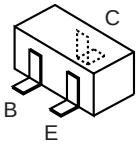

2SA1235
2SC2714
2SC3052
CMBT5401
CMBT5551
KRA102S
KRA107S
KRC102S
RT1N441C
RT1P141C



2SJ460
2SK2541

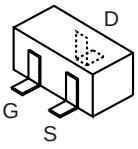

2SJ461
2SK2158

FL (HNA-11MM30) GRID ASSIGNMENT/ANODE CONNECTION

GRID ASSIGNMENT

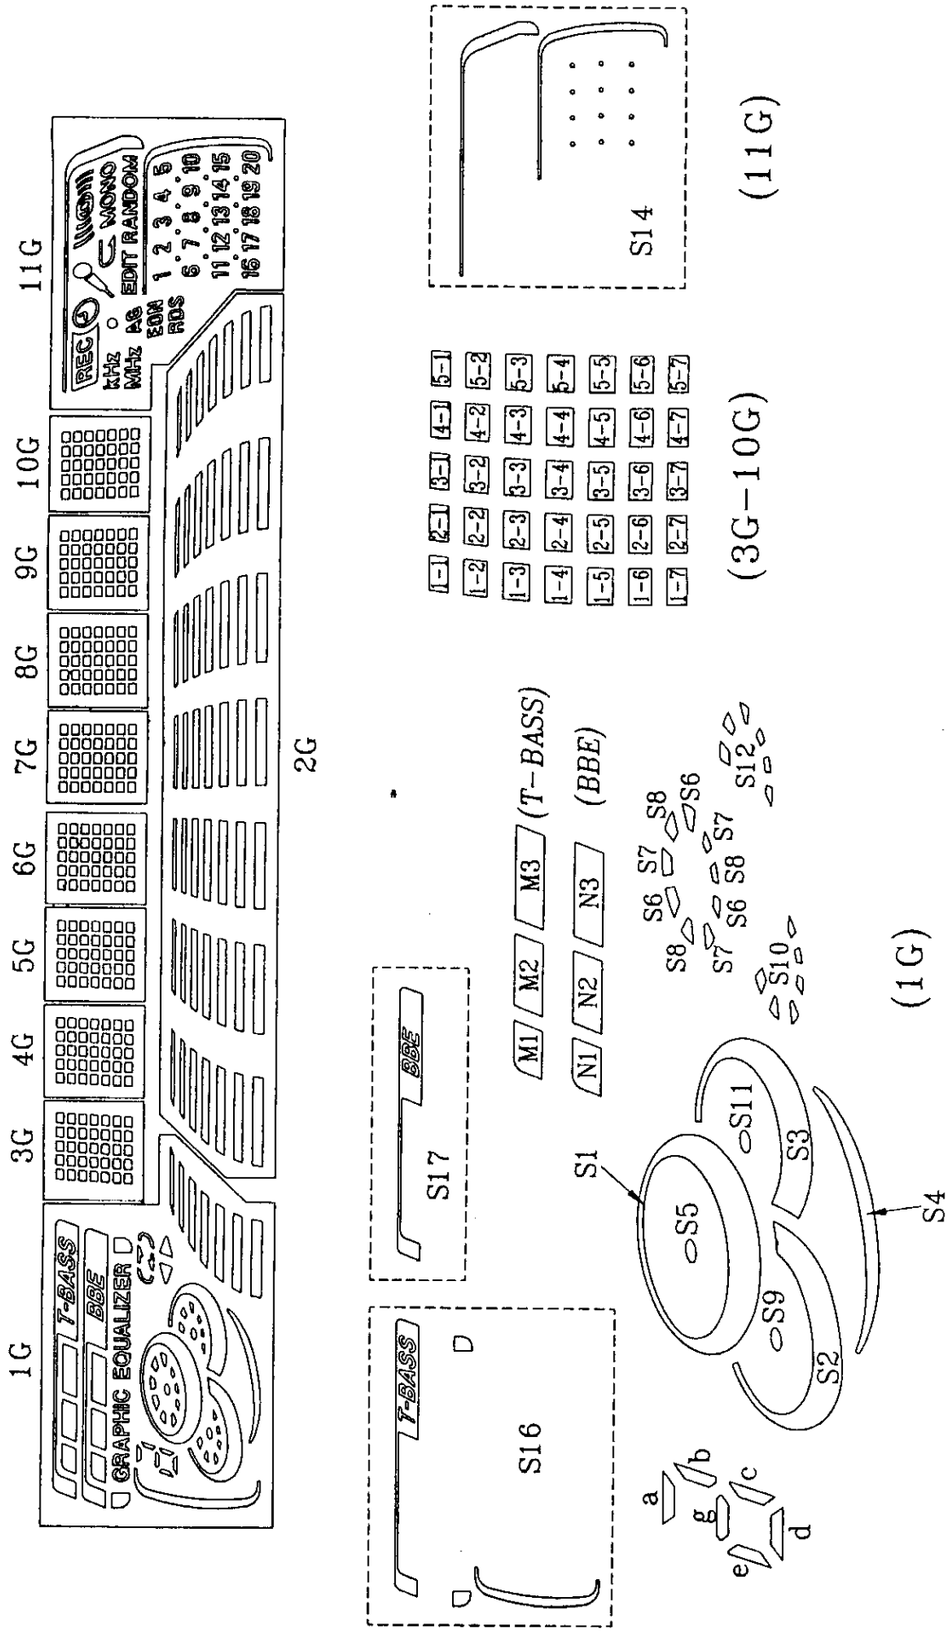

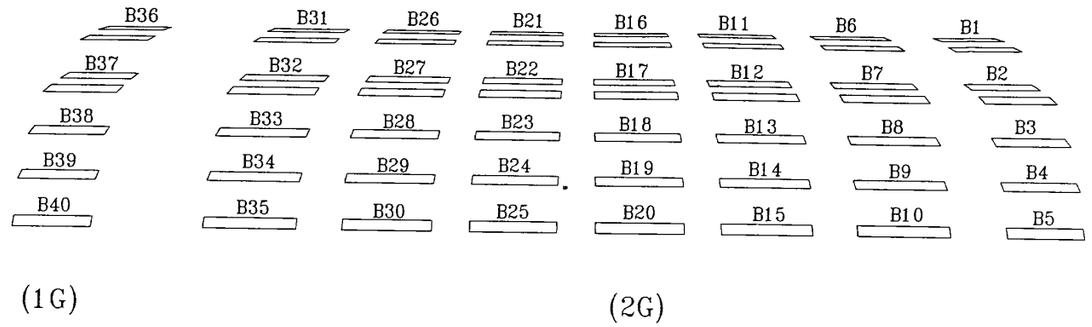

ANODE CONNECTION

	1G	2G	3G-10G	11G
P1	S17	B35	1-1	
P2	N1	B30	2-1	MONO
P3	N2	B25	3-1	RANDOM
P4	N3	B20	4-1	
P5	GRAPHIC EQUALIZER	B15	5-1	EDIT
P6		B10	1-2	
P7		B5	2-2	REC
P8		B34	3-2	kHz
P9		B29	4-2	MHz
P10		B24	5-2	○
P11	S4	B19	1-3	AS
P12	S2	B14	2-3	EON
P13	S10	B9	3-3	RDS
P14	S9	B4	4-3	S14
P15	S3	B33	5-3	20
P16	S12	B28	1-4	19
P17	S11	B23	2-4	18
P18	S1	B18	3-4	17

	1G	2G	3G-10G	11G
P19	S6	B13	4-4	16
P20	S7	B8	5-4	15
P21	S8	B3	1-5	14
P22	S5	B32	2-5	13
P23	S16	B27	3-5	12
P24	M1	B22	4-5	11
P25	M2	B17	5-5	10
P26	M3	B12	1-6	9
P27	e	B7	2-6	8
P28	a,g,d	B2	3-6	7
P29	b	B31	4-6	6
P30	c	B26	5-6	5
P31	B40	B21	1-7	4
P32	B39	B16	2-7	3
P33	B38	B11	3-7	2
P34	B37	B6	4-7	1
P35	B36	B1	5-7	

MAIN C.B

TO CD MECHANISM AZG-1

FFC602

CN602

TAPE MECHANISM
<LH>:2ZM-3MK2
<U>:ZZM-3

<LH>:TO HEAD-1 C.B
<U>:TO DECK1
CON301

CN301

<LH>:TO HEAD-2 C.B
<U>:TO DECK2
CON351

CN351

TP3, 4 (DC BLANCE)

J831
ANTENNA

AM LOOP

FM 75Ω

J602
VIDEO/AUX

J204
J204 (1/2)
SURROUND SPEAKERS

<U>:J204 (2/2)
<LH>:J205
SPEAKERS HIGH FREQ

J205

J203
SPEAKERS LOW FREQ

TO PT C.B
CN001
CNA001

TO FRONT C.B
CN101
CN601

J201
PHONES

IC401
IC601
IC101
IC201
IC801
IC991

TP8 (LCH)
GND
TP9 (RCH)

SCHEMATIC DIAGRAM-1 (FUNCTION/AM SECTION)

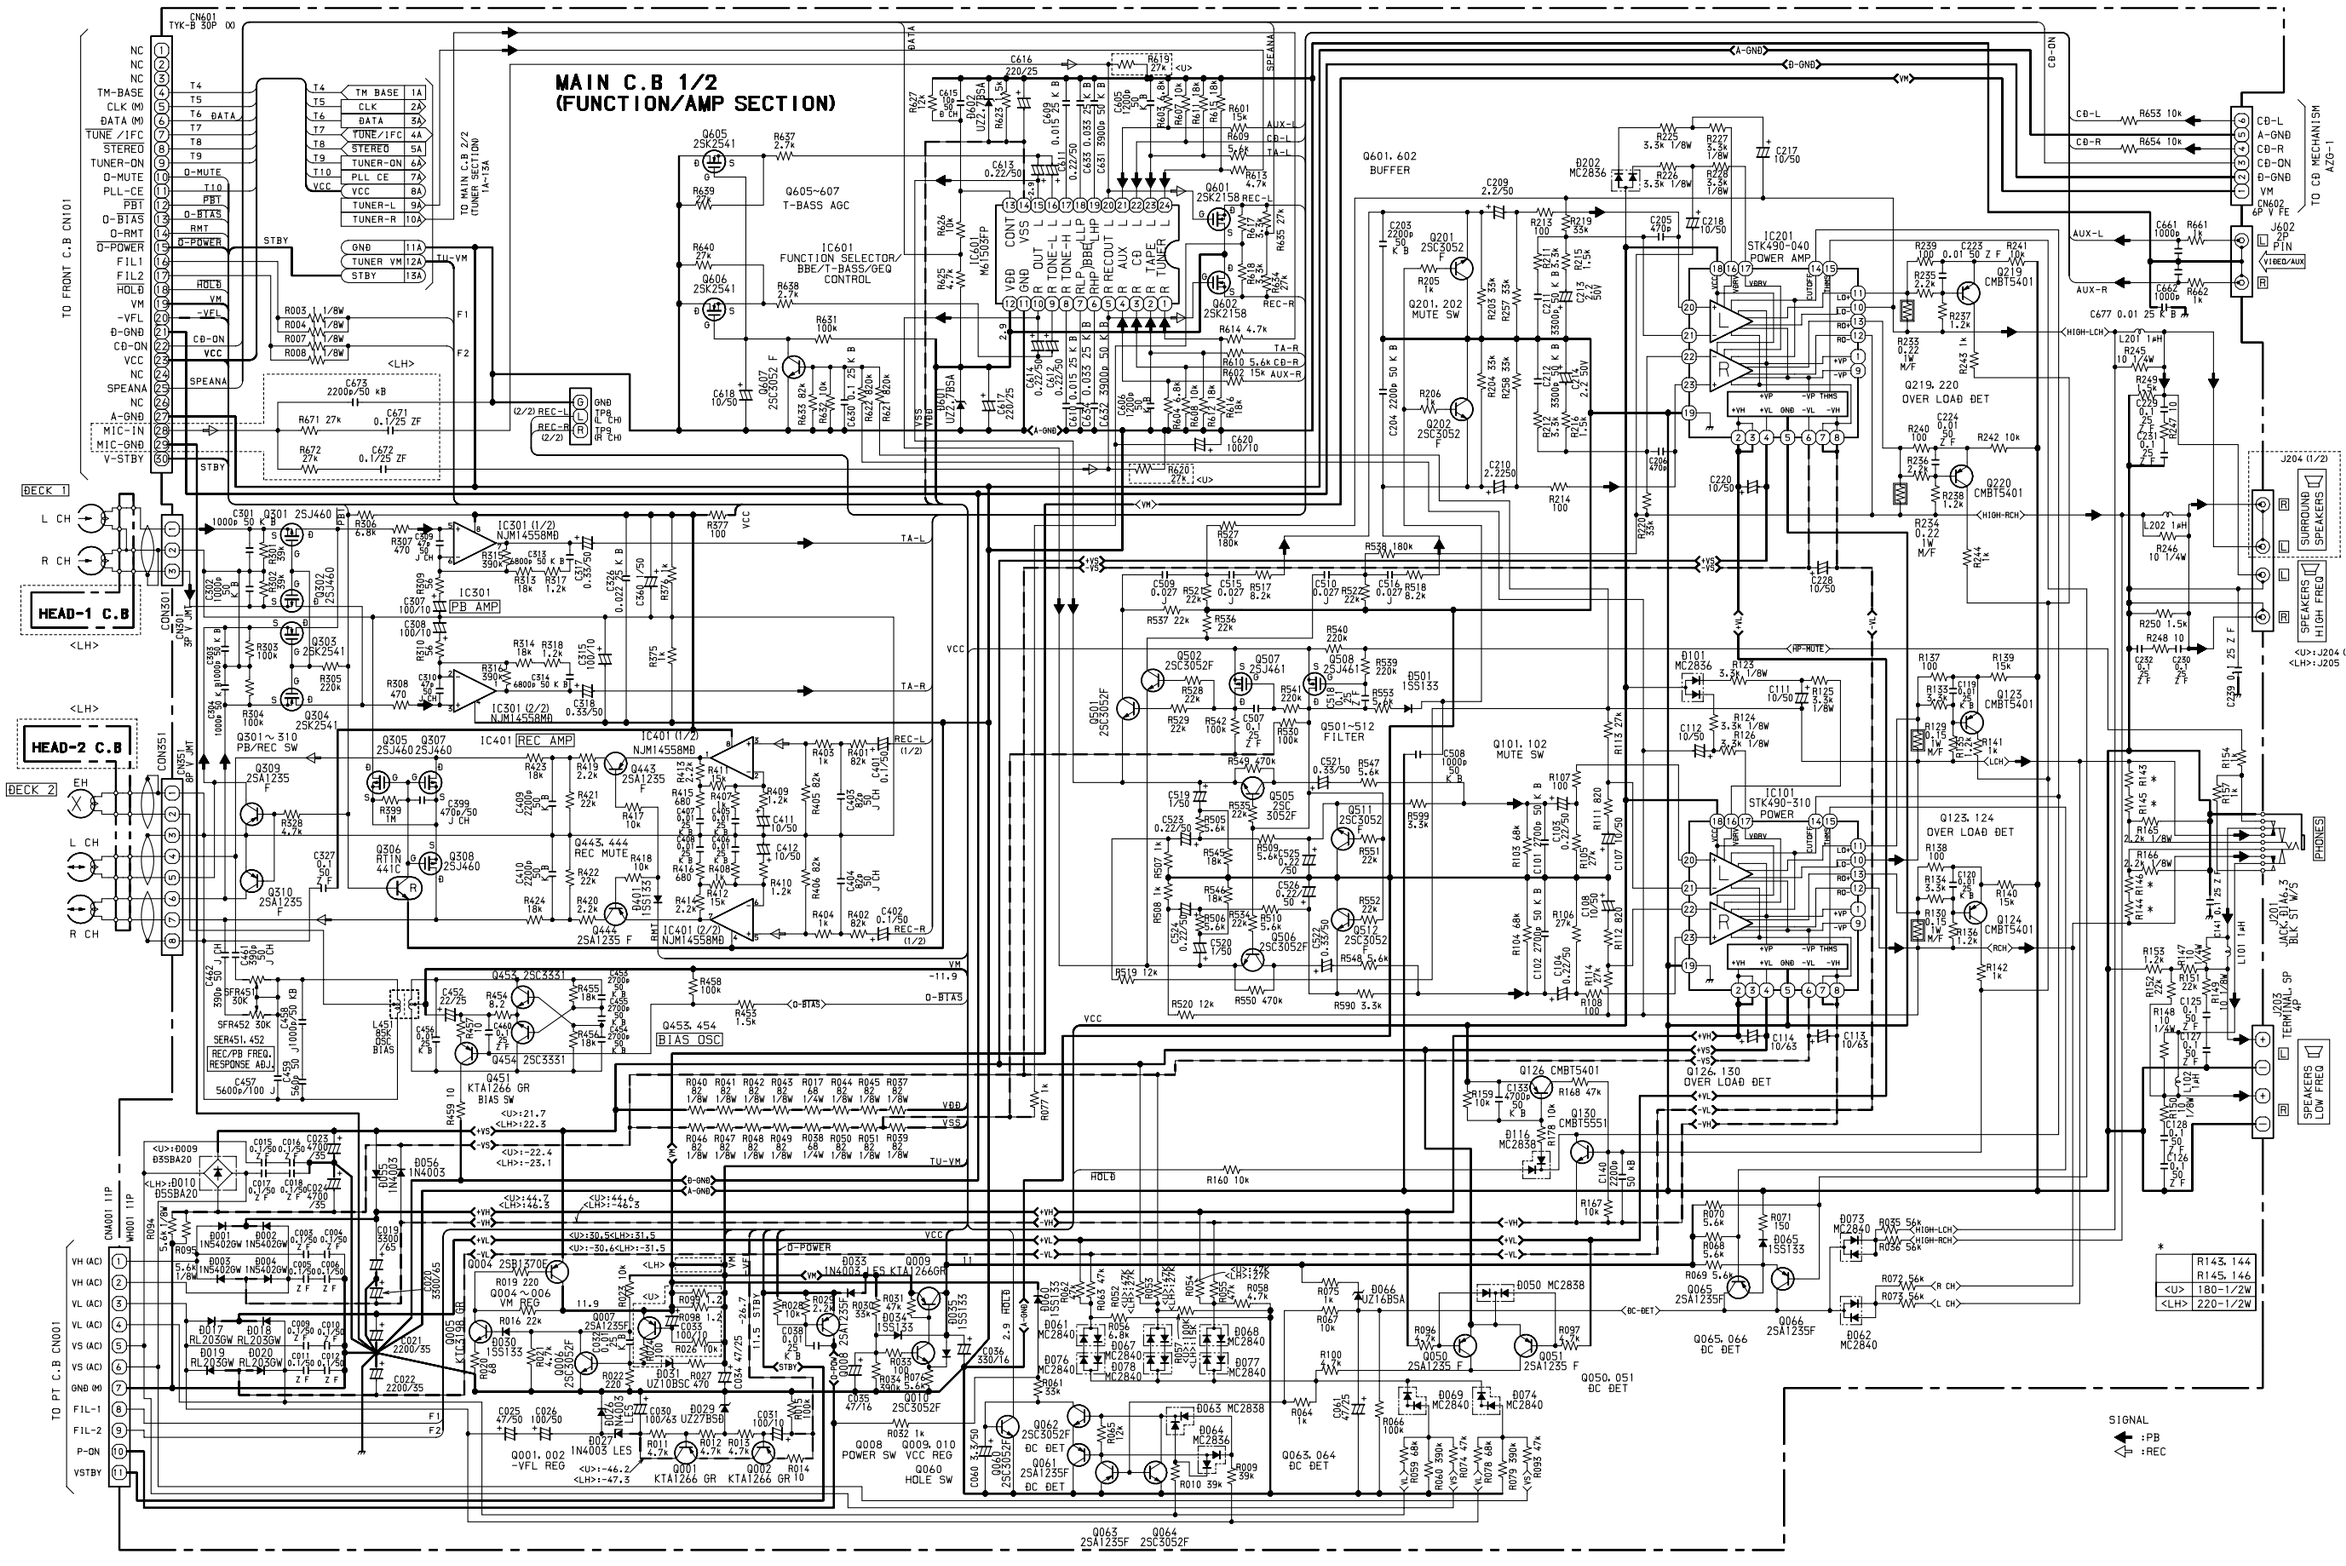

SCHEMATIC DIAGRAM-2 (TUNER SECTION)

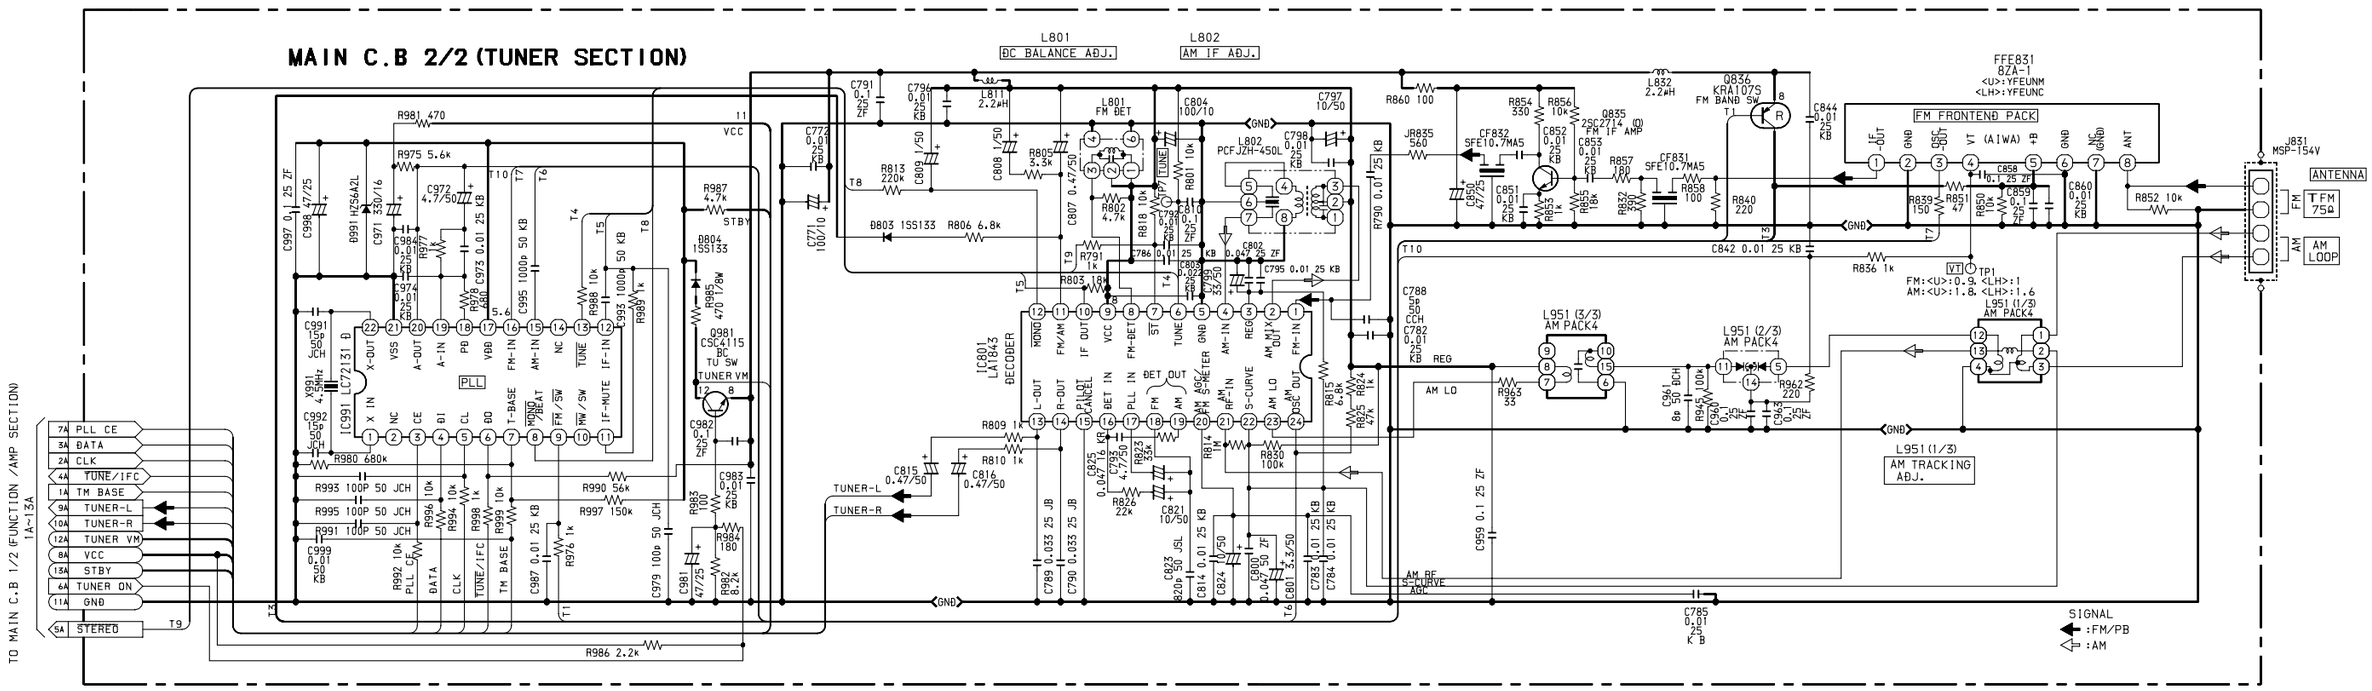

SCHEMATIC DIAGRAM-3 (PT SECTION) <LH>

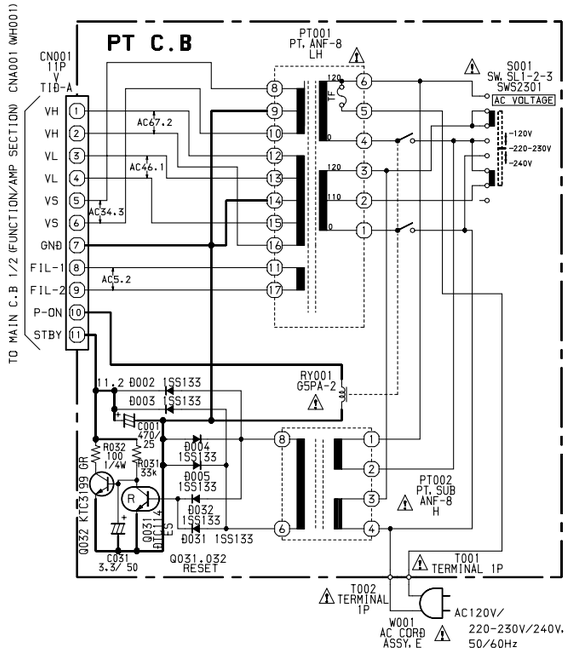

WIRING-2 (PT C.B) <LH>

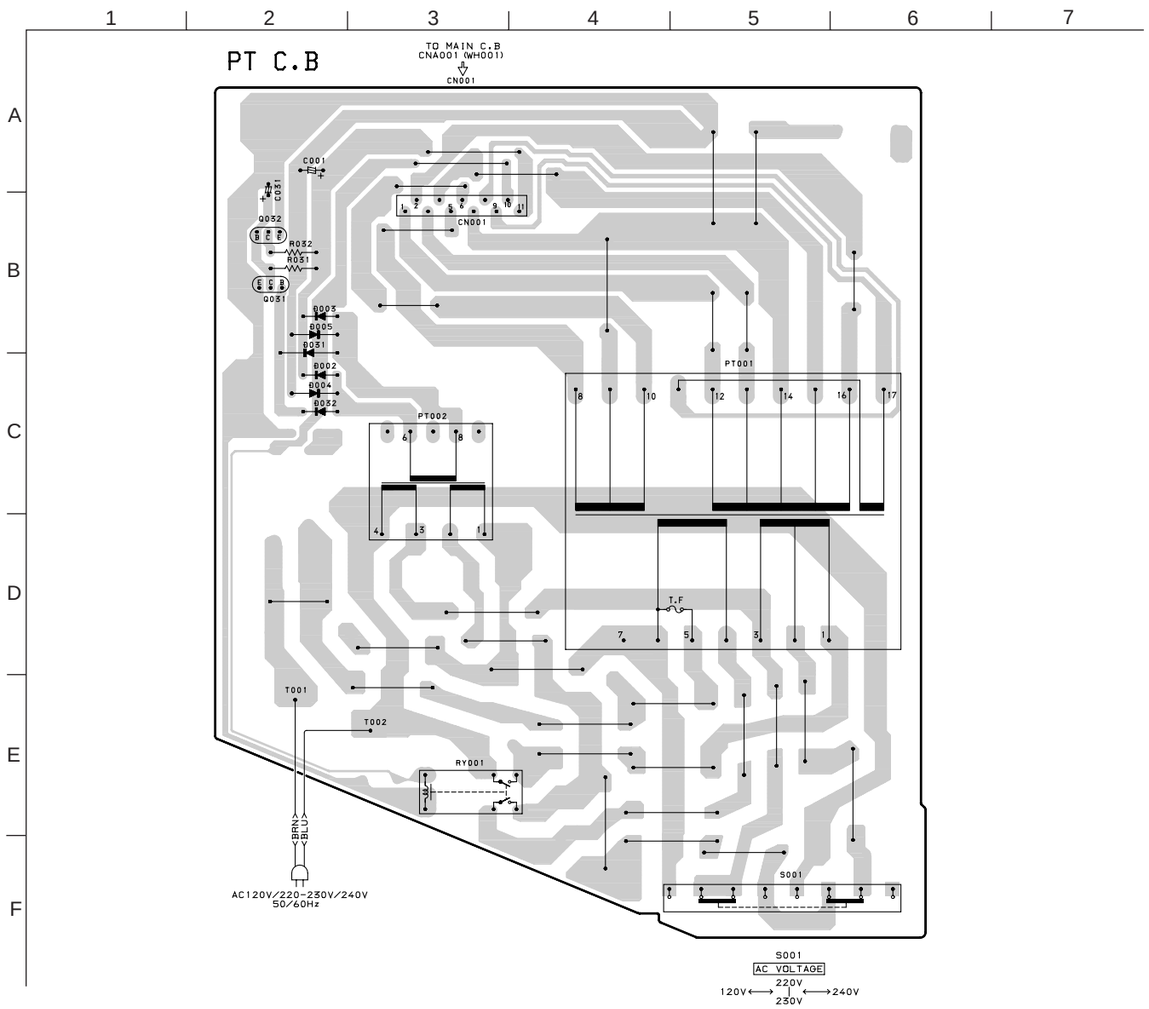

SCHEMATIC DIAGRAM-4 (PT SECTION) <U>

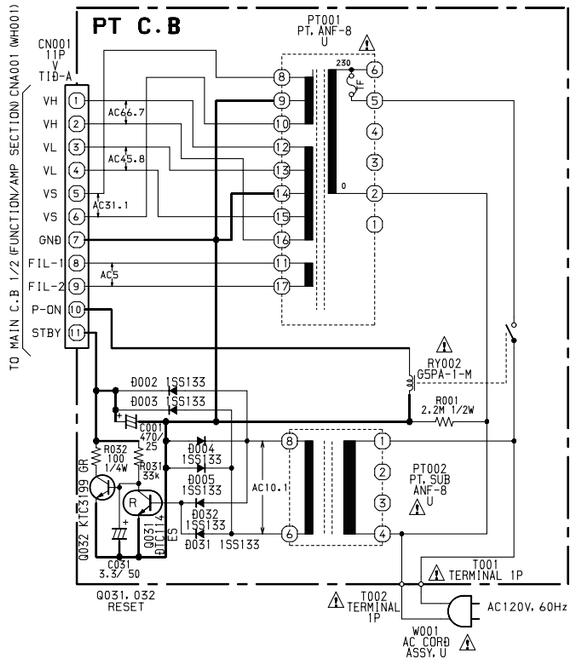

WIRING-3 (PT C.B) <U>

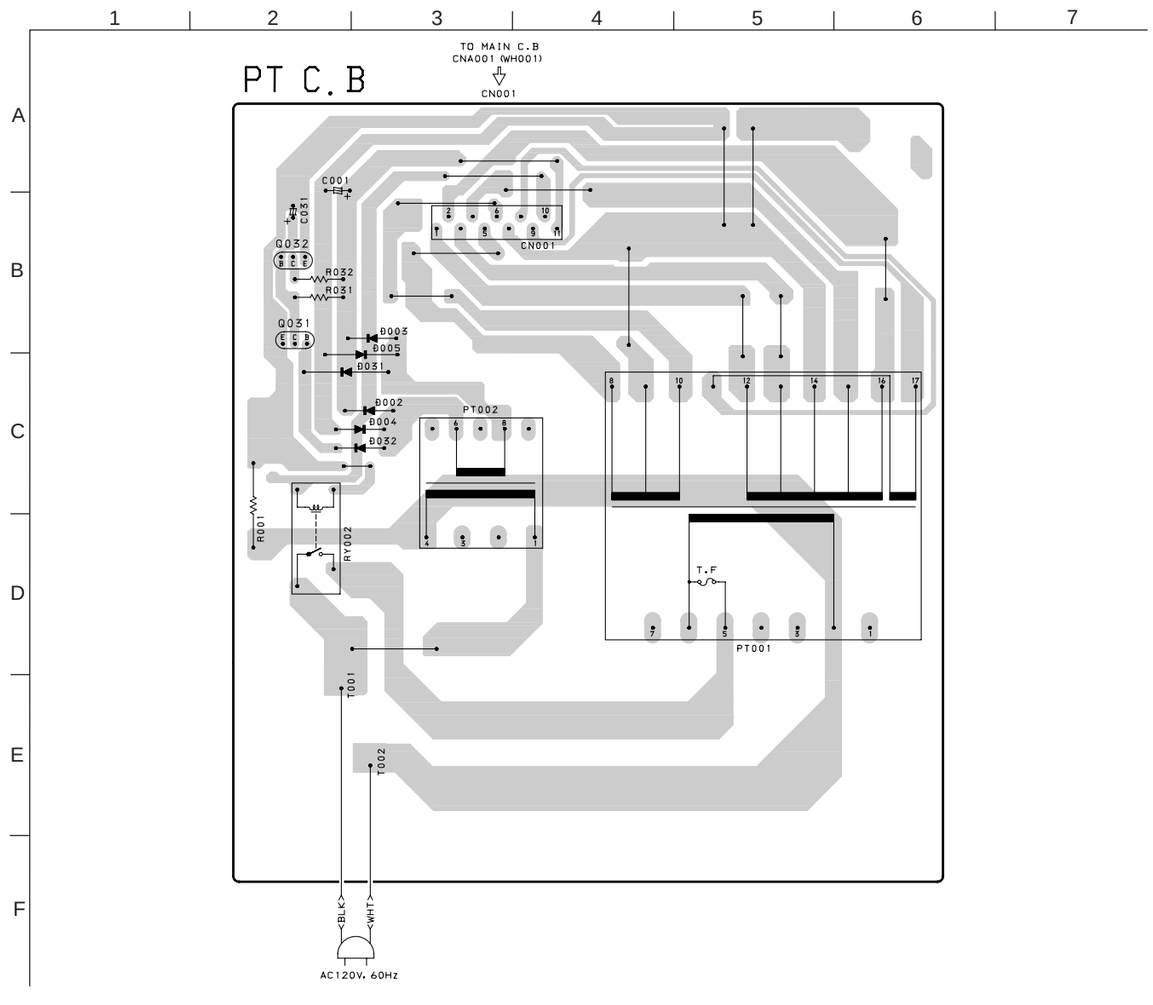

SCHEMATIC DIAGRAM-5 (FRONT SECTION) <LH>

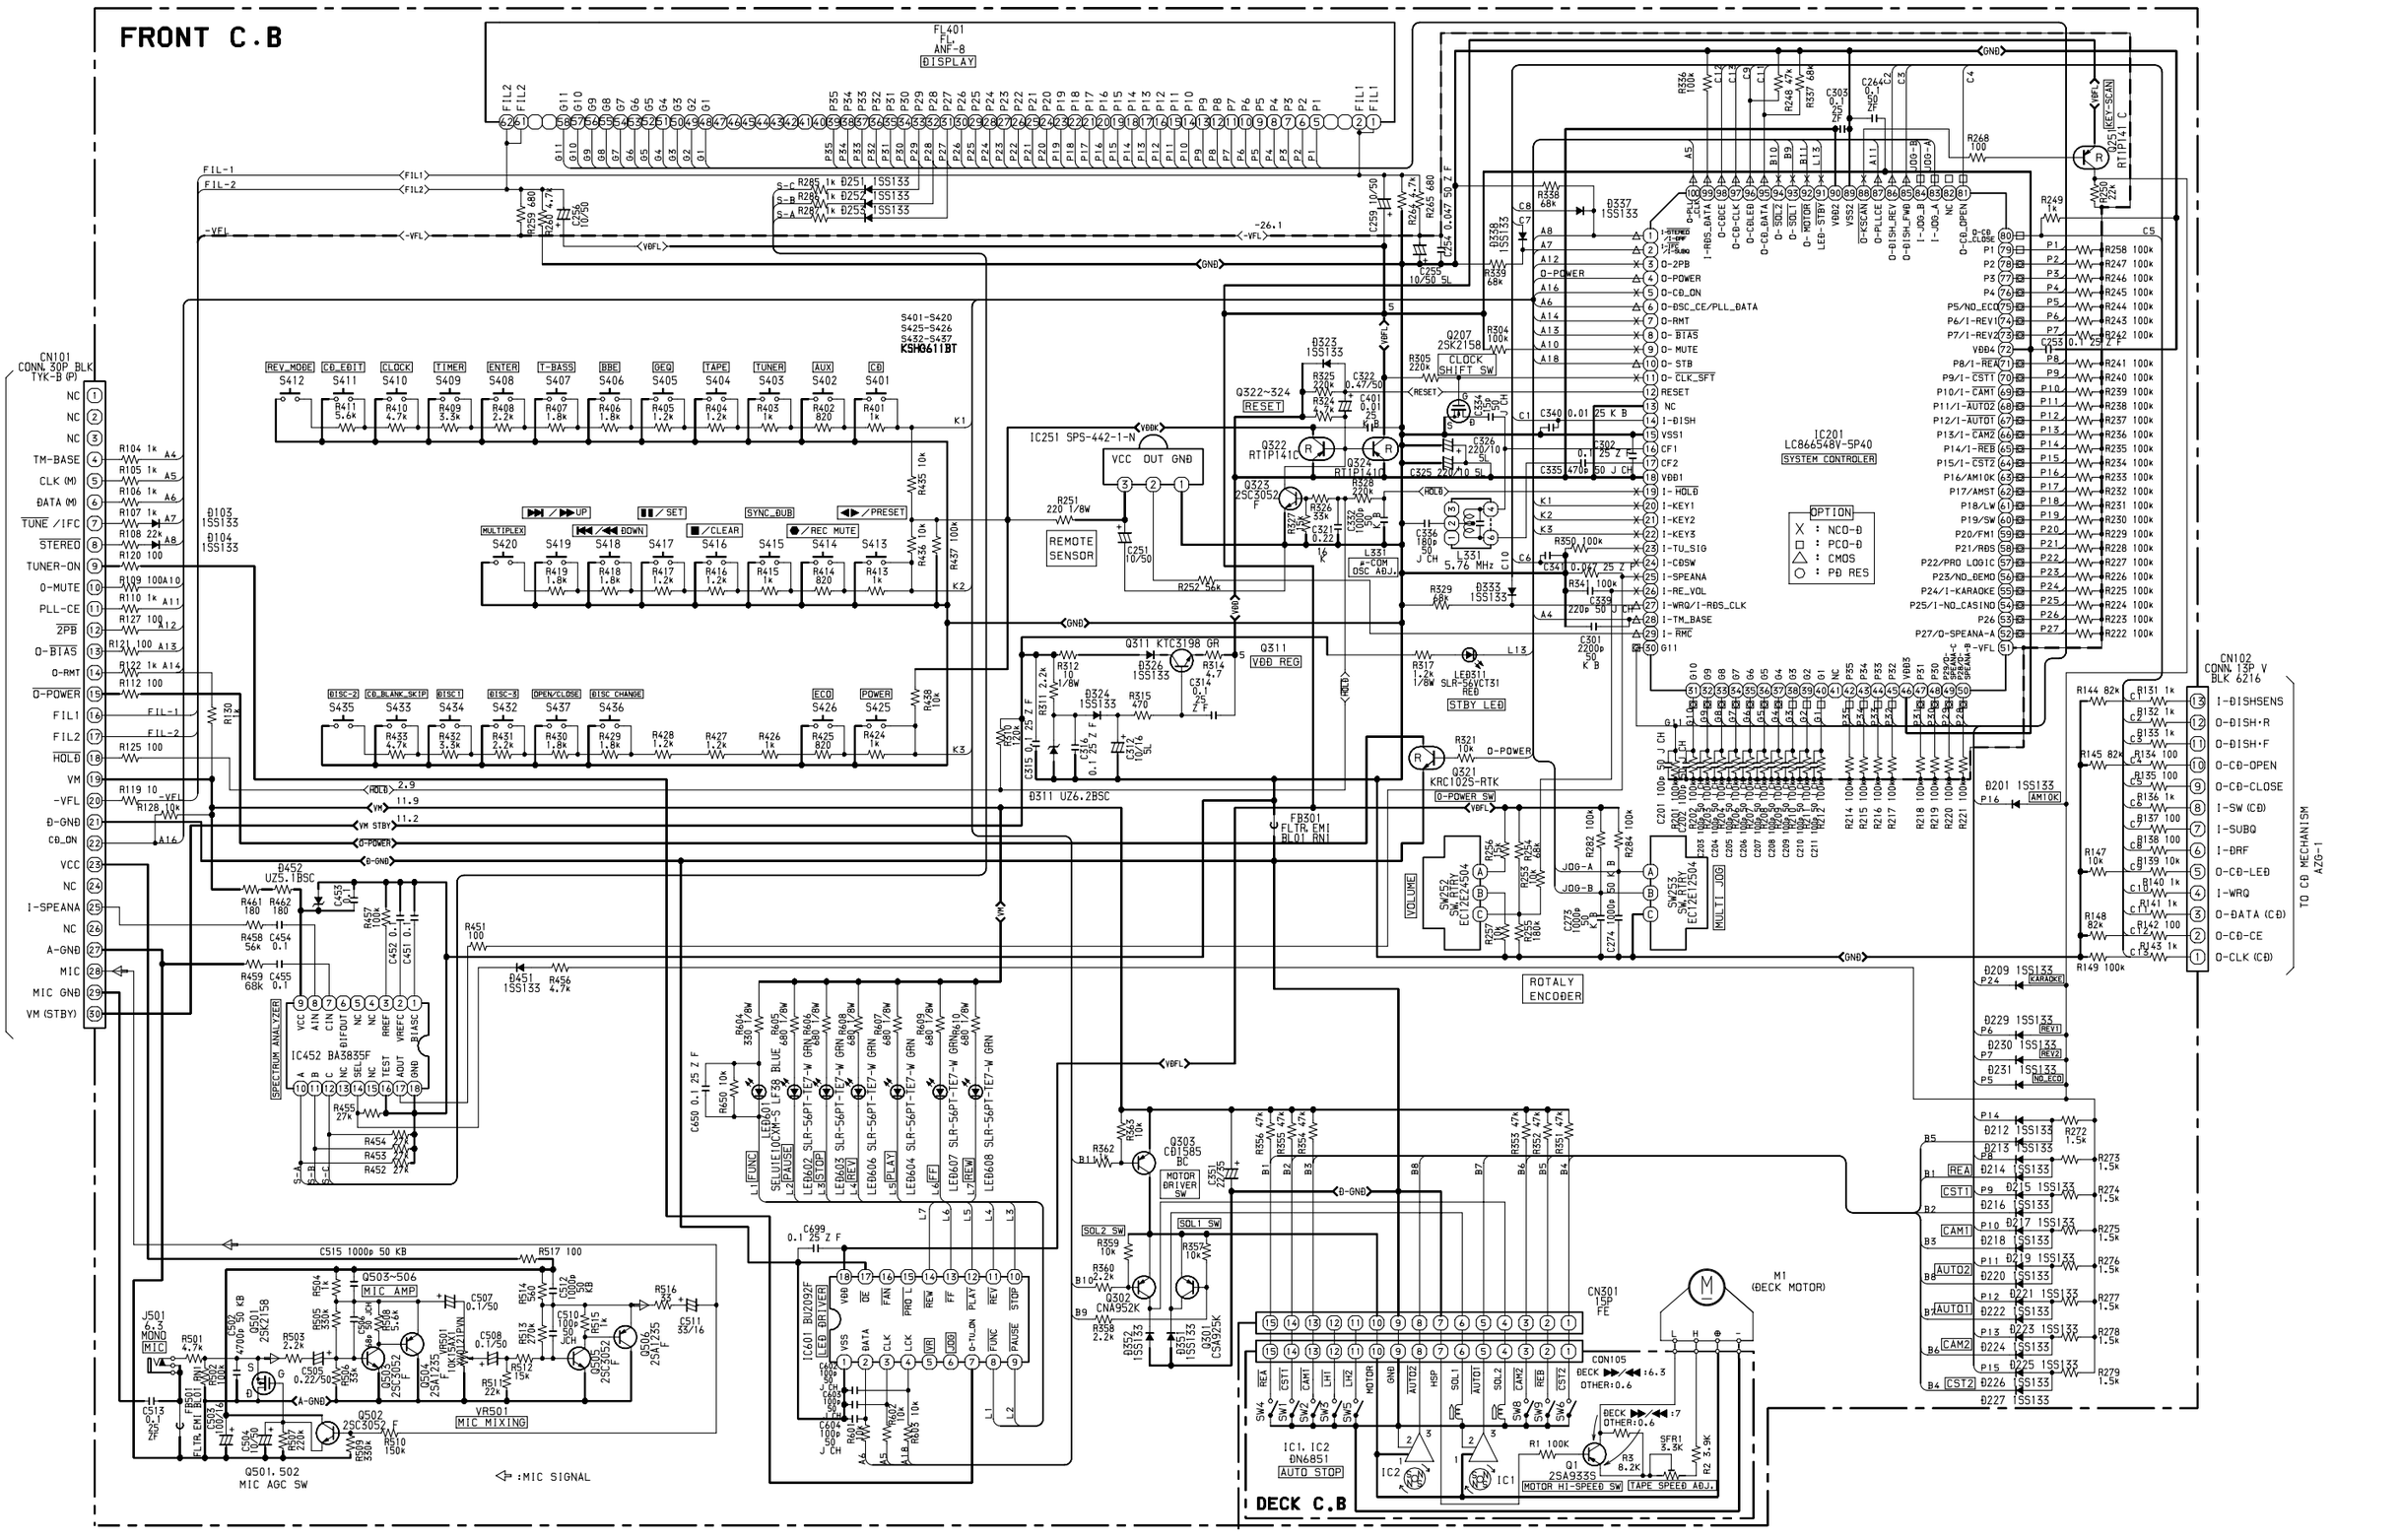

FRONT C.B

LEĐ601
FUNCTION

FL401
ĐISPLAY

IC251
REMOTE SENSOR

LEĐ311
S425
POWER

S426
ECO

SW253
MULTI JOG

VR501
MIC
MIXING

SW252
VOLUME

TO CĐ MECHANISM
AZG-1
FFC102

TO MAIN C.B
CN601

J501
MIC

S436
ĐISC CHANGE

S437
▲OPEN/CLOSE

S433
CĐ BLANK SKIP

S432 S434 S435
ĐISC ĐIRECT PLAY

FFC105
TO ĐECK C.B
CON105
2ZM-3MK2

S401 CĐ
S402 VIĐEO/AUX
S403 TUNER/BANĐ
S404 TAPE ĐECK1/2
S405 GEQ
S407 T-BASS

LEĐ604, 606, S413 ◀▶ĐIRECTION/PRESET
LEĐ603, S416 ■ CLEAR
LEĐ602, S417 ❚❚ SET

LEĐ607, S419 ▶▶❙/▶▶ UP
LEĐ608, S418 ❙◀◀/◀◀ ĐOWN
S414 ●REC/REC MUTE
S415 SYNC ĐUB
S406 BBE

S420 MULTIPLEX
S412 REV MOĐE (ĐECK2)
S411 CĐ EĐIT/CHECK
S410 CLOCK
S409 TIMER
S408 ENTER

SCHEMATIC DIAGRAM-6 (FRONT SECTION) <U>

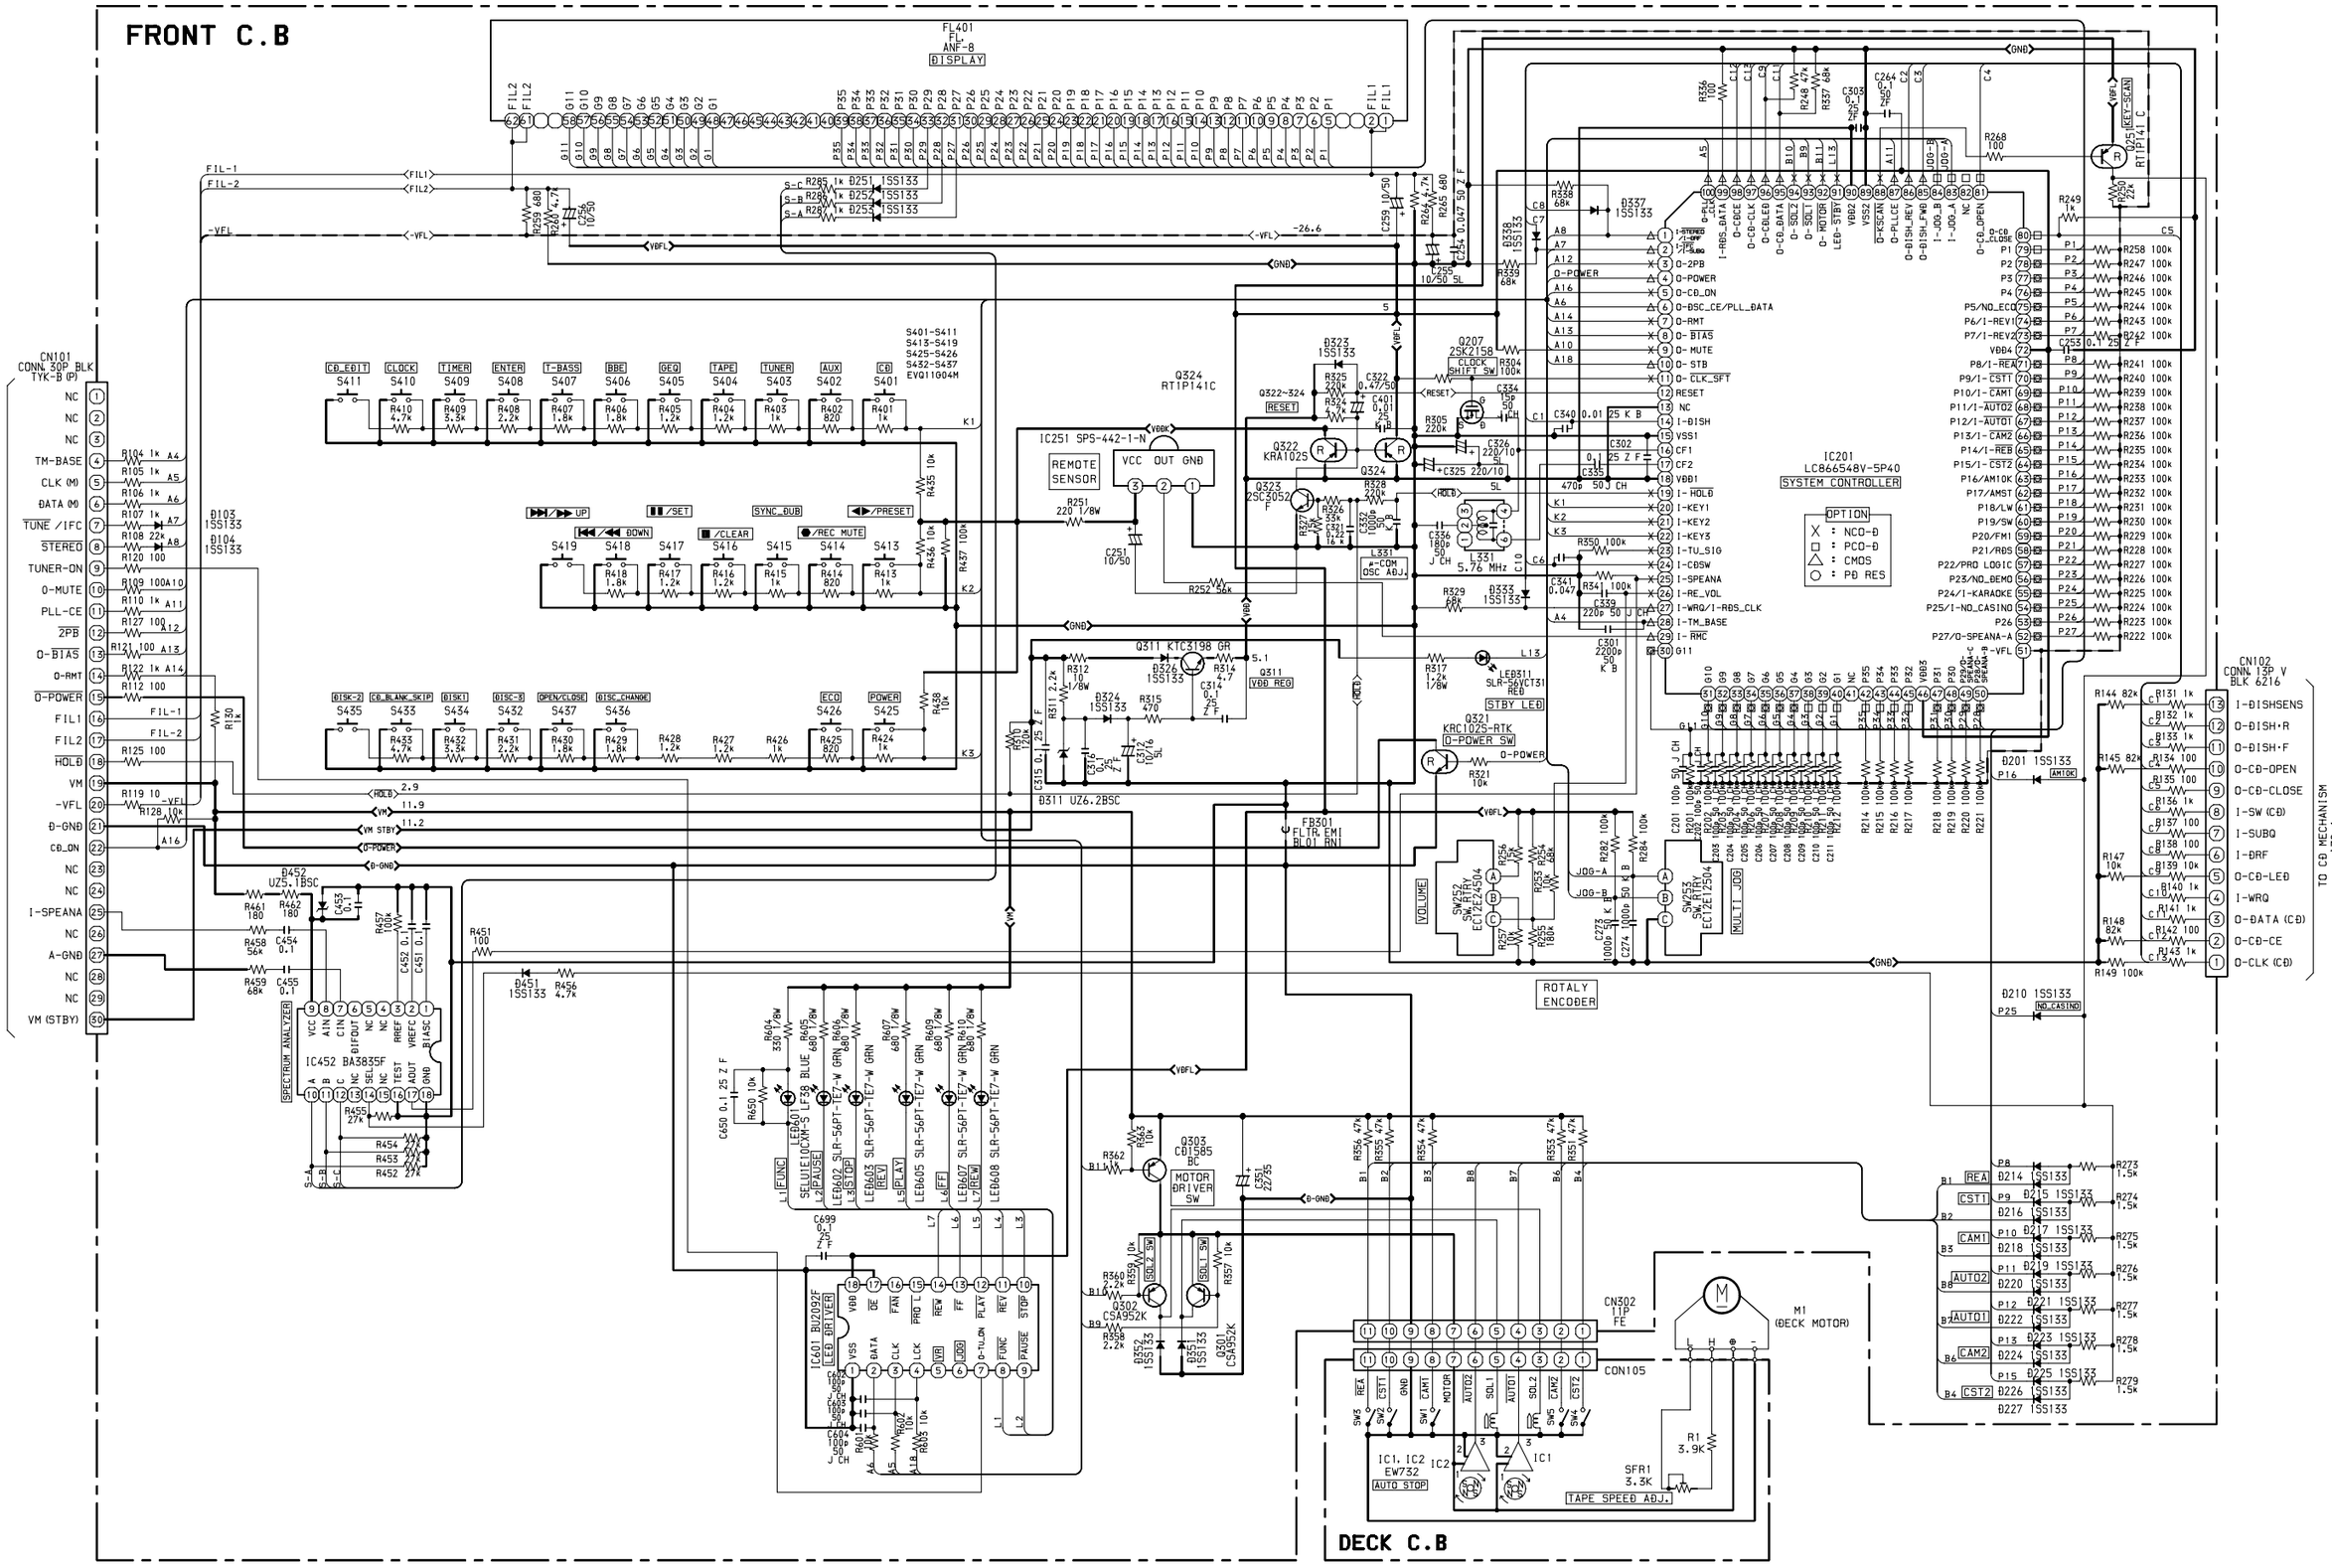

FRONT C.B

LEÐ601
FUNCTION

FL401
ÐISPLAY

IC251
REMOTE SENSOR

LEÐ311
S425
POWER

S426
ECO

SW253
MULTI JOG

SW252
VOLUME

TO MAIN C.B
CN601

TO CÐ MECHANISM
AZG-1

FFC102

S436
ÐISC CHANGE

S433
CÐ BLANK SKIP

S437
▲OPEN/CLOSE

S432 3
S434 1
S435 2
ÐISC ÐIRECT PLAY

CN302

FFC105

TO ÐECK C.B
CON105

ZZM-3

S401 CÐ
S402 VIÐEO/AUX
S403 TUNER BANÐ
S404 TAPE ÐECK 1/2
S405 GEQ

LEÐ605, S413 ▶PRESET
LEÐ603, S416 ■CLEAR
LEÐ602, S417 ❚❚SET
S407 T-BASS

LEÐ607, S419 ▶▶|/▶▶ UP
LEÐ608, S418 |◀◀/◀◀ ÐOWN
S414 ● REC/REC MUTE
S415 SYNC ÐUB
S406 BBE

S411 CÐ EÐIT/CHECK
S410 CLOCK
S409 TIMER
S408 ENTER

WIRING-6 (DECK C.B) <LH>

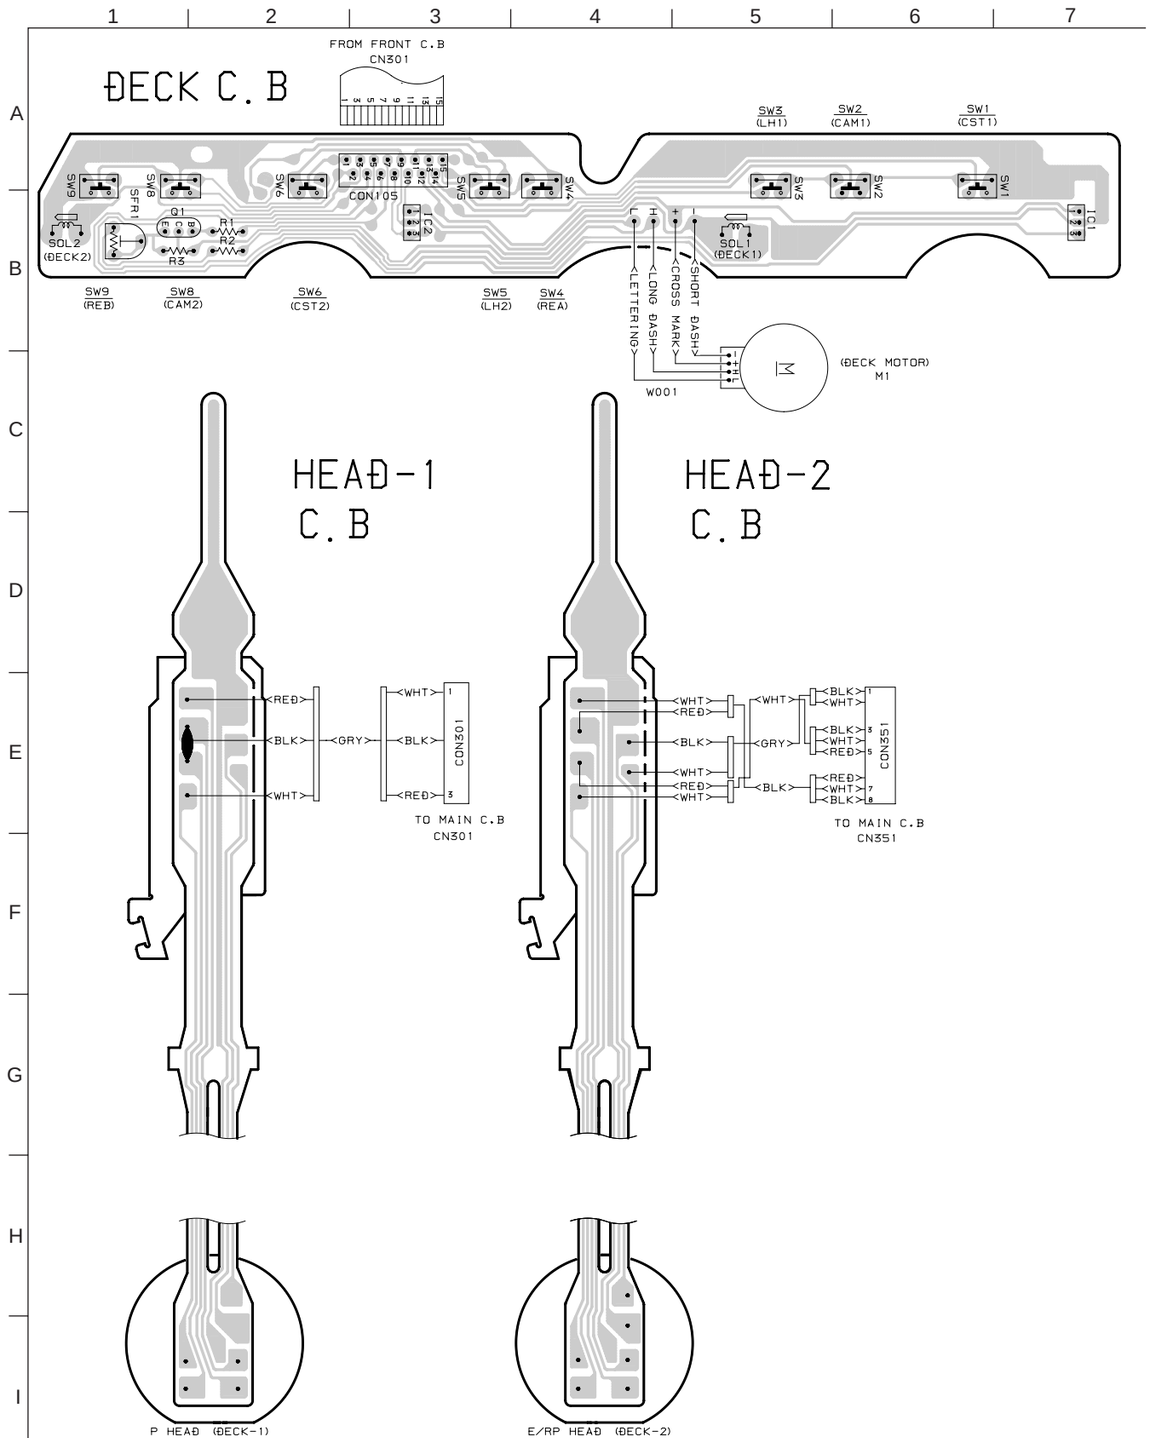

WIRING-7 (DECK C.B) <U>

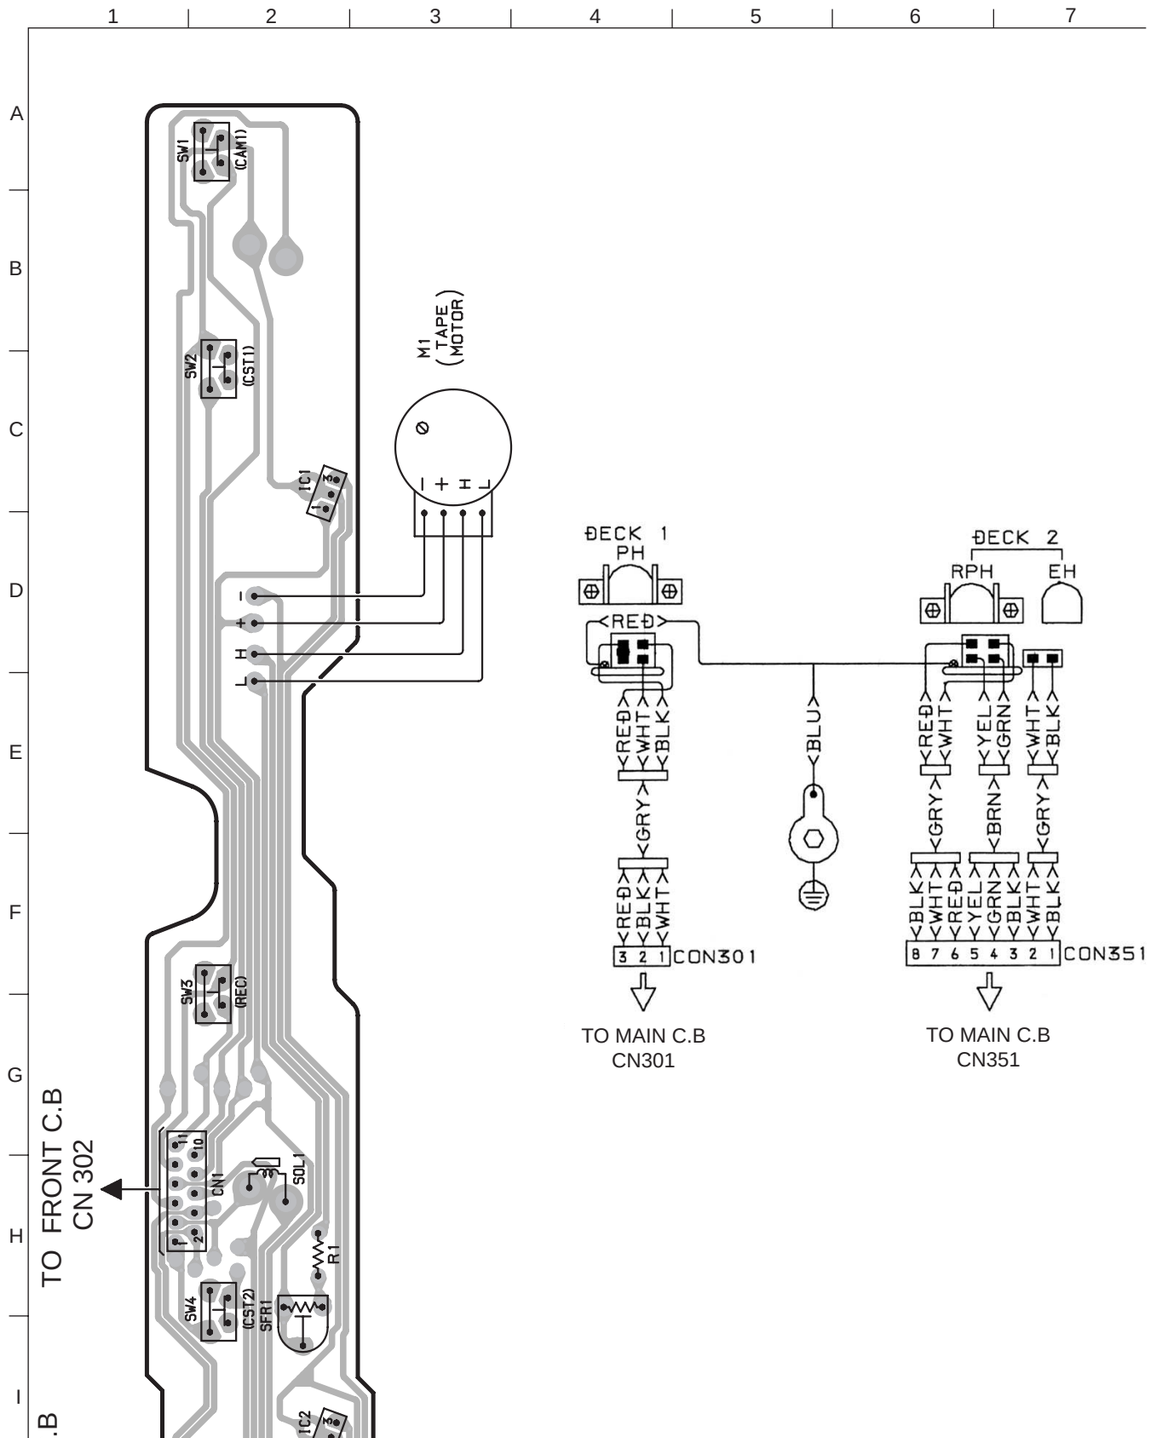

IC BLOCK DIAGRAM

IC, LA1843

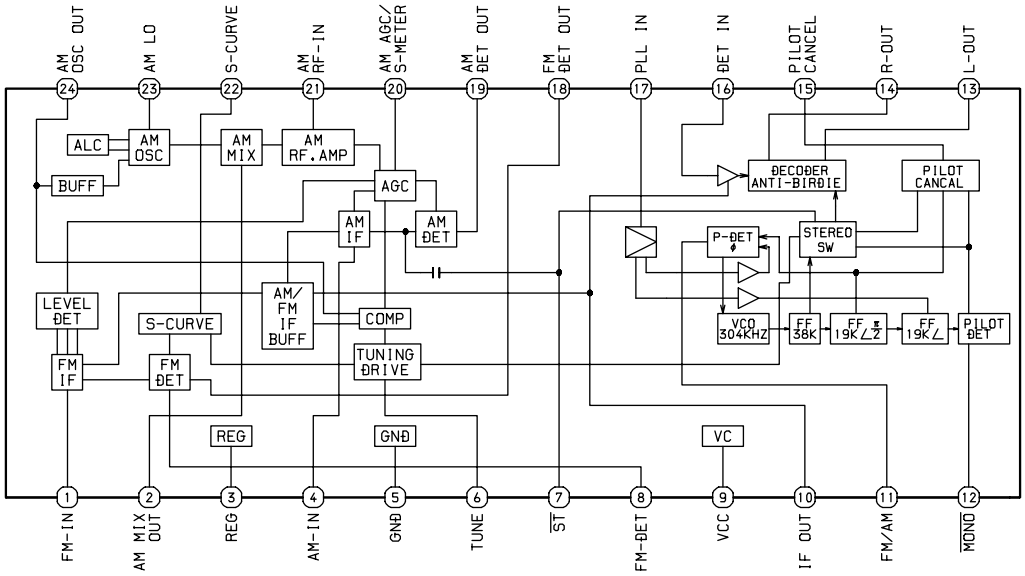

IC, LC72131D

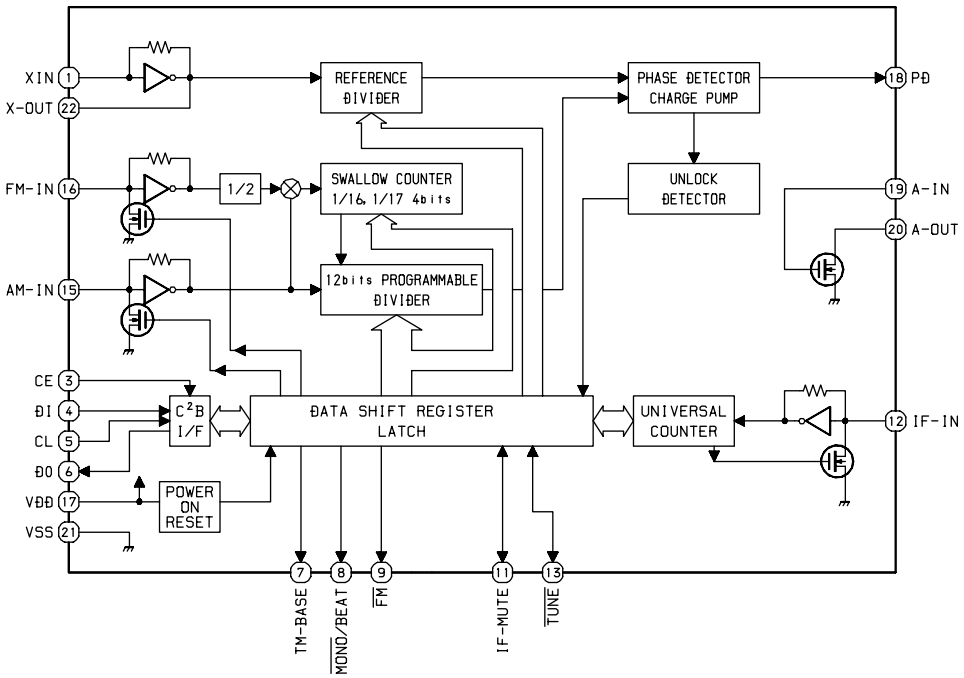

IC, BA3835F

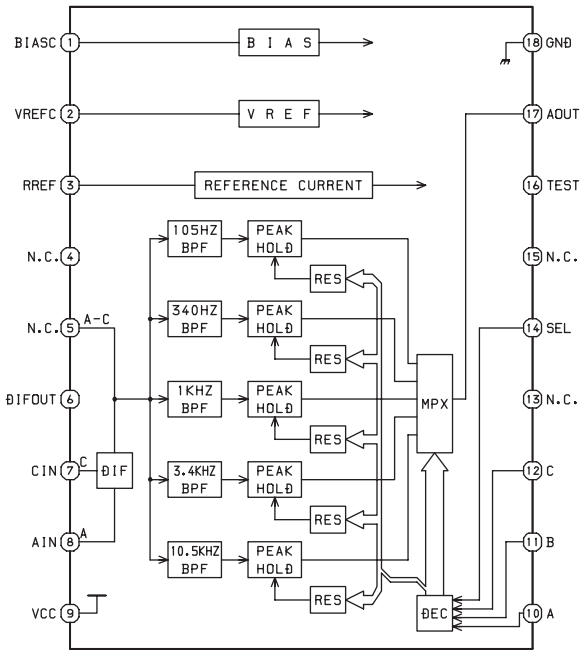

IC, BU2092F

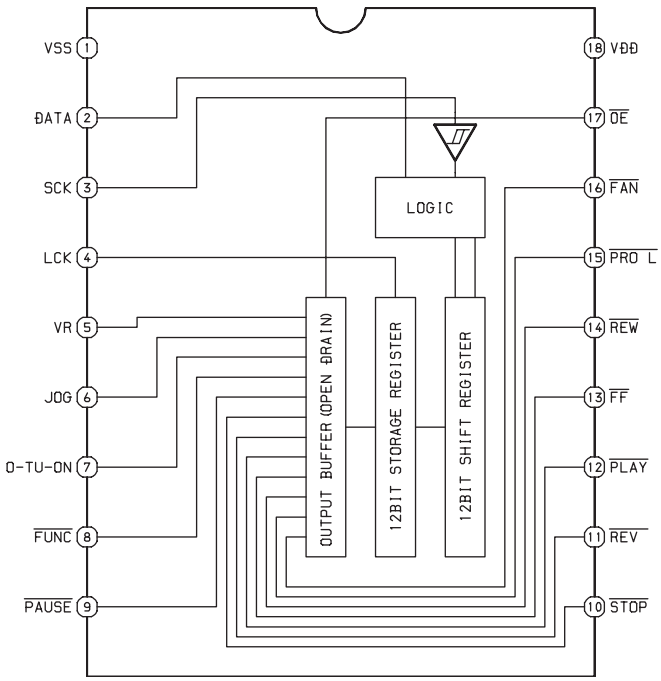

IC, M61503FP

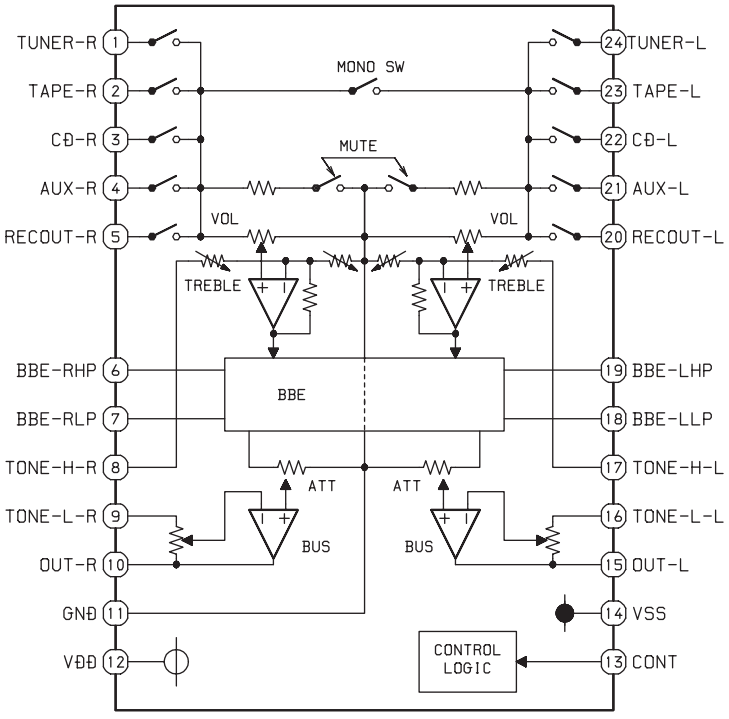

IC DESCRIPTION

IC, LC866548V-5P87 <U>, LC866548V-5P40 <LH>

Pin No.	Pin Name	I/O	Description
1	I-STEREO/I-DRF	I	Stereo detected input/CD DRF input
2	I-IFC/I-SUBQ	I	Tune IF count serial data input/CD SUBQ input
3	O-2PB	O	Deck 2 playback switch output
4	O-POWER	O	System power supply ON/OFF output
5	O-CD-ON	O	CD power ON/OFF output
6	O-PLL_DATA	O	LED driver, Tuner IC, Function IC data output
7	O-RMT	O	Deck 2 REC MUTE output
8	O-BIAS	O	Deck 2 bias ON/OFF output
9	O-MUTE	O	System mute ON/OFF output
10	O-STB	O	Latch strobe output for LED driver IC
11	O-CLK_SFT	O	Micon clock shift output
12	RESET	I	System reset
13	NC	–	Not connected
14	I-DISH	I	CD turntable photo sensor A/D converter input
15	VSS1	–	GND
16	CF1	–	5.76 MHz oscillator circuit
17	CF2	–	5.76 MHz oscillator circuit
18	VDD1	–	Power supply input
19	I-HOLD	I	Power failure detected input
20	I-KEY1	I	KEY input (A/D)
21	I-KEY2	I	KEY input (A/D)
22	I-KEY3	I	KEY input (A/D)
23	I-TU_SIG	I	Tuner signal input
24	I-CDSW	I	CD mechanical switch A/D converter input
25	I-SPEANA	I	A/D input for spectrum analyzer display
26	I-RE_VOL	I	Rotary encoder input (VOL)
27	I-WRQ/I-RDS_CLK	I	CD WRQ input/Tuner RDS clock input
28	I-TM_BASE	I	Reference clock input for timer watch
29	I-RMC	I	System remotecontrol signal input
30 ~ 40	G11 ~ G1	O	FL GRID output G11 ~ G1
41	NC	–	Not connected
42 ~ 45	P35 ~ P32	O	FL SEGMENT output P35 ~ P32
46	VDD3	–	Power supply input
47 ~ 48	P31 ~ P30	O	FL SEGMENT output P31 ~ P30
49	P29/O-SPEANA-C	O	FL SEGMENT output P29/Spectrum analyzer band switching output
50	P28/O-SPEANA-B	O	FL SEGMENT output P28/Spectrum analyzer band switching output
51	VFL	–	Power supply input for FL display
52	P27/O-SPEANA-A	O	FL SEGMENT output P27/Spectrum analyzer band switch output
53	P26	O	FL SEGMENT output P26
54	P25/I-NO_CASINO	I/O	FL SEGMENT output P25/NO CASINO DEMO input to diode
55	P24/I-KARAOKE	I/O	FL SEGMENT output P24/KARAOKE input to diode
56	P23/NO_DEMO	I/O	FL SEGMENT output P23/NO DEMO input to diode

Pin No.	Pin Name	I/O	Description
57	P22/PRO LOGIC	I/O	FL SEGMENT output P22/PROLOGIC input to diode (not used)
58	P21/RDS	I/O	FL SEGMENT output P21/RDS input to diode
59	P20/FM1	I/O	FL SEGMENT output P20/FM1 input to diode
60	P19/SW	I/O	FL SEGMENT output P19/SW input to diode
61	P18/LW	I/O	FL SEGMENT output P18/LW input to diode
62	P17/AMST	I/O	FL SEGMENT output P17/AMST input to diode
63	P16/AM10K	I/O	FL SEGMENT output P16/AM10K input to diode
64	P15/I-$\overline{\text{CST2}}$	I/O	FL SEGMENT output P15/DECK2 cassette detect switch data input
65	P14/I-$\overline{\text{REB}}$	I/O	FL SEGMENT output P14/DECK2 side-B record OK switch data input
66	P13/I-$\overline{\text{CAM2}}$	I/O	FL SEGMENT output P13/DECK2 CAM switch signal input
67	P12/I-$\overline{\text{AUTO1}}$	I/O	FL SEGMENT output P12/DECK1 AUTO STOP signal input
68	P11/I-$\overline{\text{AUTO2}}$	I/O	FL SEGMENT output P11/DECK2 AUTO STOP signal input
69	P10/I-$\overline{\text{CAM1}}$	I/O	FL SEGMENT output P10/DECK1 CAM switch data input
70	P9/I-$\overline{\text{CST1}}$	I/O	FL SEGMENT output P9/DECK1 cassette detect switch data input
71	P8/I-$\overline{\text{REA}}$	I/O	FL SEGMENT output P8/DECK2 side A record OK switch data input
72	VDD4	–	Power supply input
73	P7/I-REV2	I/O	FL SEGMENT output P7/DECK2 REVERSE mode input to diode
74	P6/I-REV1	I/O	FL SEGMENT output P6/DECK1 REVERSE mode input to diode
75	P5/NO_ECO	I/O	FL SEGMENT output P5/NO ECO MODE input to diode
76 ~ 79	P4 ~ P1	O	FL SEGMENT output P4 ~ P1
80	O-CD CLOSE	O	CD TRAY CLOSE data output
81	O-CD OPEN	O	CD TRAY OPEN data output
82	NC	–	Not connected
83	I-JOG_A	I	Rotary encoder A input (JOG)
84	I-JOG_B	I	Rotary encoder B input (JOG)
85	O-DISH_FWD	O	CD turntable forward rotation output
86	O-DISH_REV	O	CD turntble reverse rotation output
87	O-PLL_CE	O	PLL IC chip enable output
88	O-$\overline{\text{KSCAN}}$	O	Switch SCAN timing output
89	VSS2	–	GND
90	VDD2	–	Power supply input
91	LED-$\overline{\text{STBY}}$	O	STAND BY LED (Echo mode) ouput
92	O-$\overline{\text{MOTOR}}$	O	DECK MOTOR $\overline{\text{ON}}$/OFF output
93	O-$\overline{\text{SOL1}}$	O	DECK1 soleroid ouput
94	O-$\overline{\text{SOL2}}$	O	DECK2 soleroid ouput
95	O-CD-DATA	O	CD DATA output
96	O-CD-LED	O	CD LED output
97	O-CD CLK	O	CD clock output
98	O-CD CE	O	CD chip enable output
99	I-RDS_DATA	I	RDS data input
100	O-PLL_CLK	O	PLL IC CLOCK output

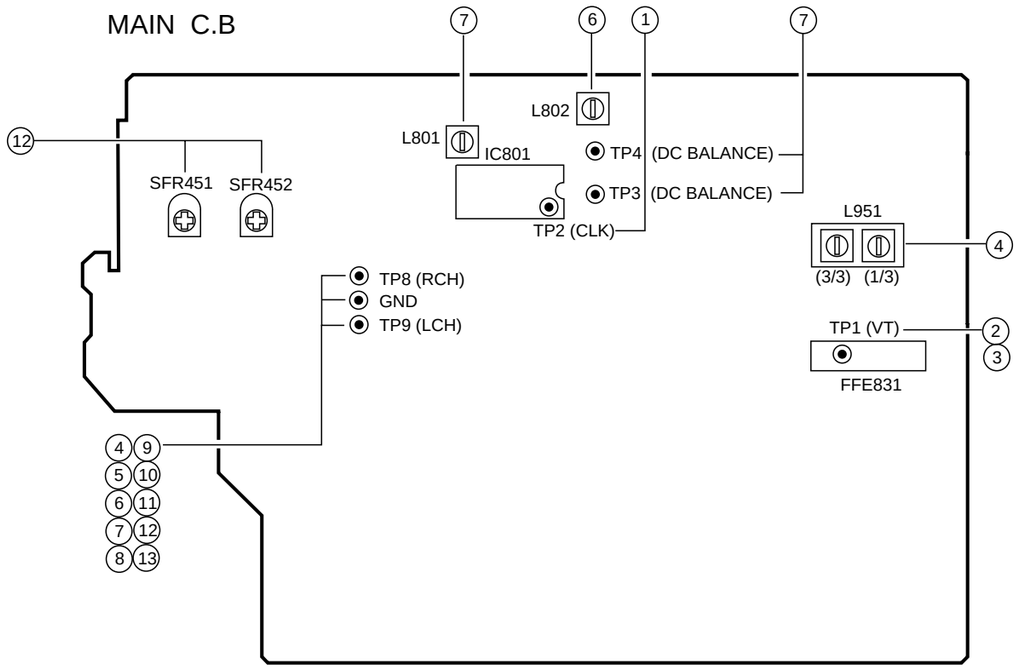

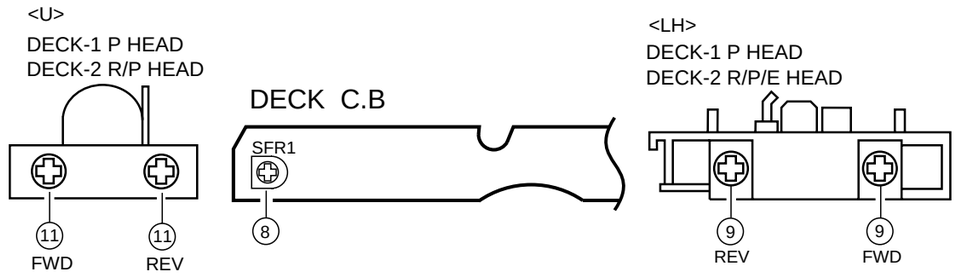

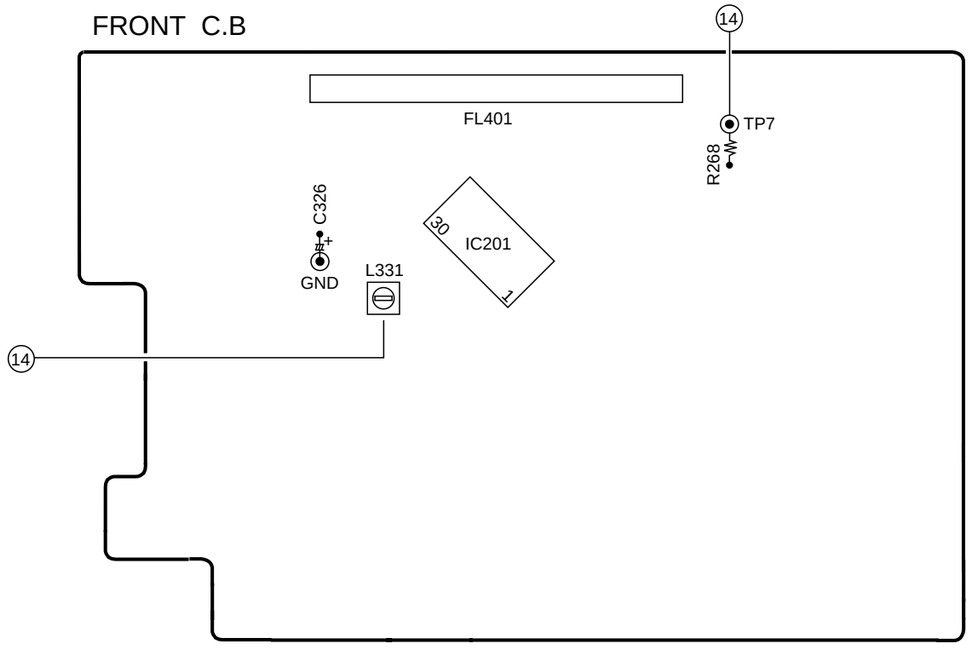

< TUNER SECTION >

1. Clock frequency Check
   Settings : • Test point : TP2
   Method : Set to AM 1710kHz and check that the test point is 2160kHz ± 45Hz.

2. AM VT Check
   Settings : • Test point : TP1 (VT)
   Method : Set to AM 1710kHz, 530kHz and check that the test point is less than 8.5V (1710kHz) and more than 0.6V (530kHz).

3. FM VT Check
   Settings : • Test point : TP1 (VT)
   Method : Set to FM 87.5MHz, 108.0MHz and check that the test point is more than 0.5V (87.5MHz) and less than 8.0V (108.0MHz).

4. AM Tracking Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L951(1/3) 1000kHz
   Method : Set to AM 1000kHz and adjust L951(1/3) so that the level at the test point becomes maximum.

5. FM Tracking Check
   Settings : • Test point : TP8(Lch), TP9(Rch)
   Method : Set to FM 98.0MHz and check that the test point is less than 9dBμV.

6. AM IF Adjustment
   Settings : • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location :
   L802 ..... 1000kHz

7. DC Balance / Mono Distortion Adjustment
   Settings : • Test point : TP3, TP4 (DC Balance)
   : TP8(Lch), TP9(Rch) (Distortion)
   • Adjustment location : L801
   • Input level : 60dBμV
   Method : Set to FM 98.0MHz and adjust L801 so that the voltage between TP3 and TP4 becomes 0V ± 0.3V. Next, check that the distortion is less than 1.3%.

< DECK SECTION >

8. Tape Speed Adjustment (DECK 2)
   Settings : • Test tape : TTA–100
   • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location : SFR1
   Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz ± 5Hz and ±45Hz (REV) with respect to forward speed.

9. Head Azimuth Adjustment (DECK 1, DECK 2)
   Settings : • Test tape : TTA–330
   • Test point : TP8(Lch), TP9(Rch)
   • Adjustment location : Head azimuth adjustment screw
   Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.

10. PB Frequency Response Check (DECK 1, DECK 2)
    Settings : • Test tape : TTA–300
    • Test point :TP8(Lch), TP9(Rch)
    Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.

11. PB Sensitivity Check (DECK 1, DECK 2)
    Settings : • Test tape : TTA–200
    • Test point : TP8(Lch), TP9(Rch)
    Method : Play back the test tape and check that the output level of the test point is 140mV ± 3dB.

12. REC/PB Frequency Response Adjustment (DECK 2)
    Settings : • Test tape : TTA–602
    • Test point : TP8(Lch), TP9(Rch)
    • Input signal : 1kHz / 8kHz (LINE IN)
    • Adjustment location : SFR451 (Lch)
    SFR452 (Rch)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP8, TP9 becomes -20VU. Record and play back the 1kHz and 8kHz signals and adjust SFRs so that the output of the 8kHz signals becomes 0dB ± 0.5dB with respect to that of the 1kHz signal.

13. REC/PB Sensitivity Check (DECK 2)
    Settings : • Test tape : TTA–602
    • Test point : TP8(Lch), TP9(Rch)
    • Input signal : 1kHz (LINE IN)
    Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP8, TP9 becomes 0VU. Record and play back the 1kHz signals and check that the output is –2dB ± 3.0dB.

< FRONT SECTION >

14. μ-CON OSC Adjustment
    Settings : • Test point : TP7 and GND
    • Adjustment location : L331
    Method : Insert AC plug while pressing POWER and TUNER function keys. Adjust L331 so that the frequency at the test point is 153.84Hz ± 0.15Hz.

MECHANICAL EXPLODED VIEW 1/1

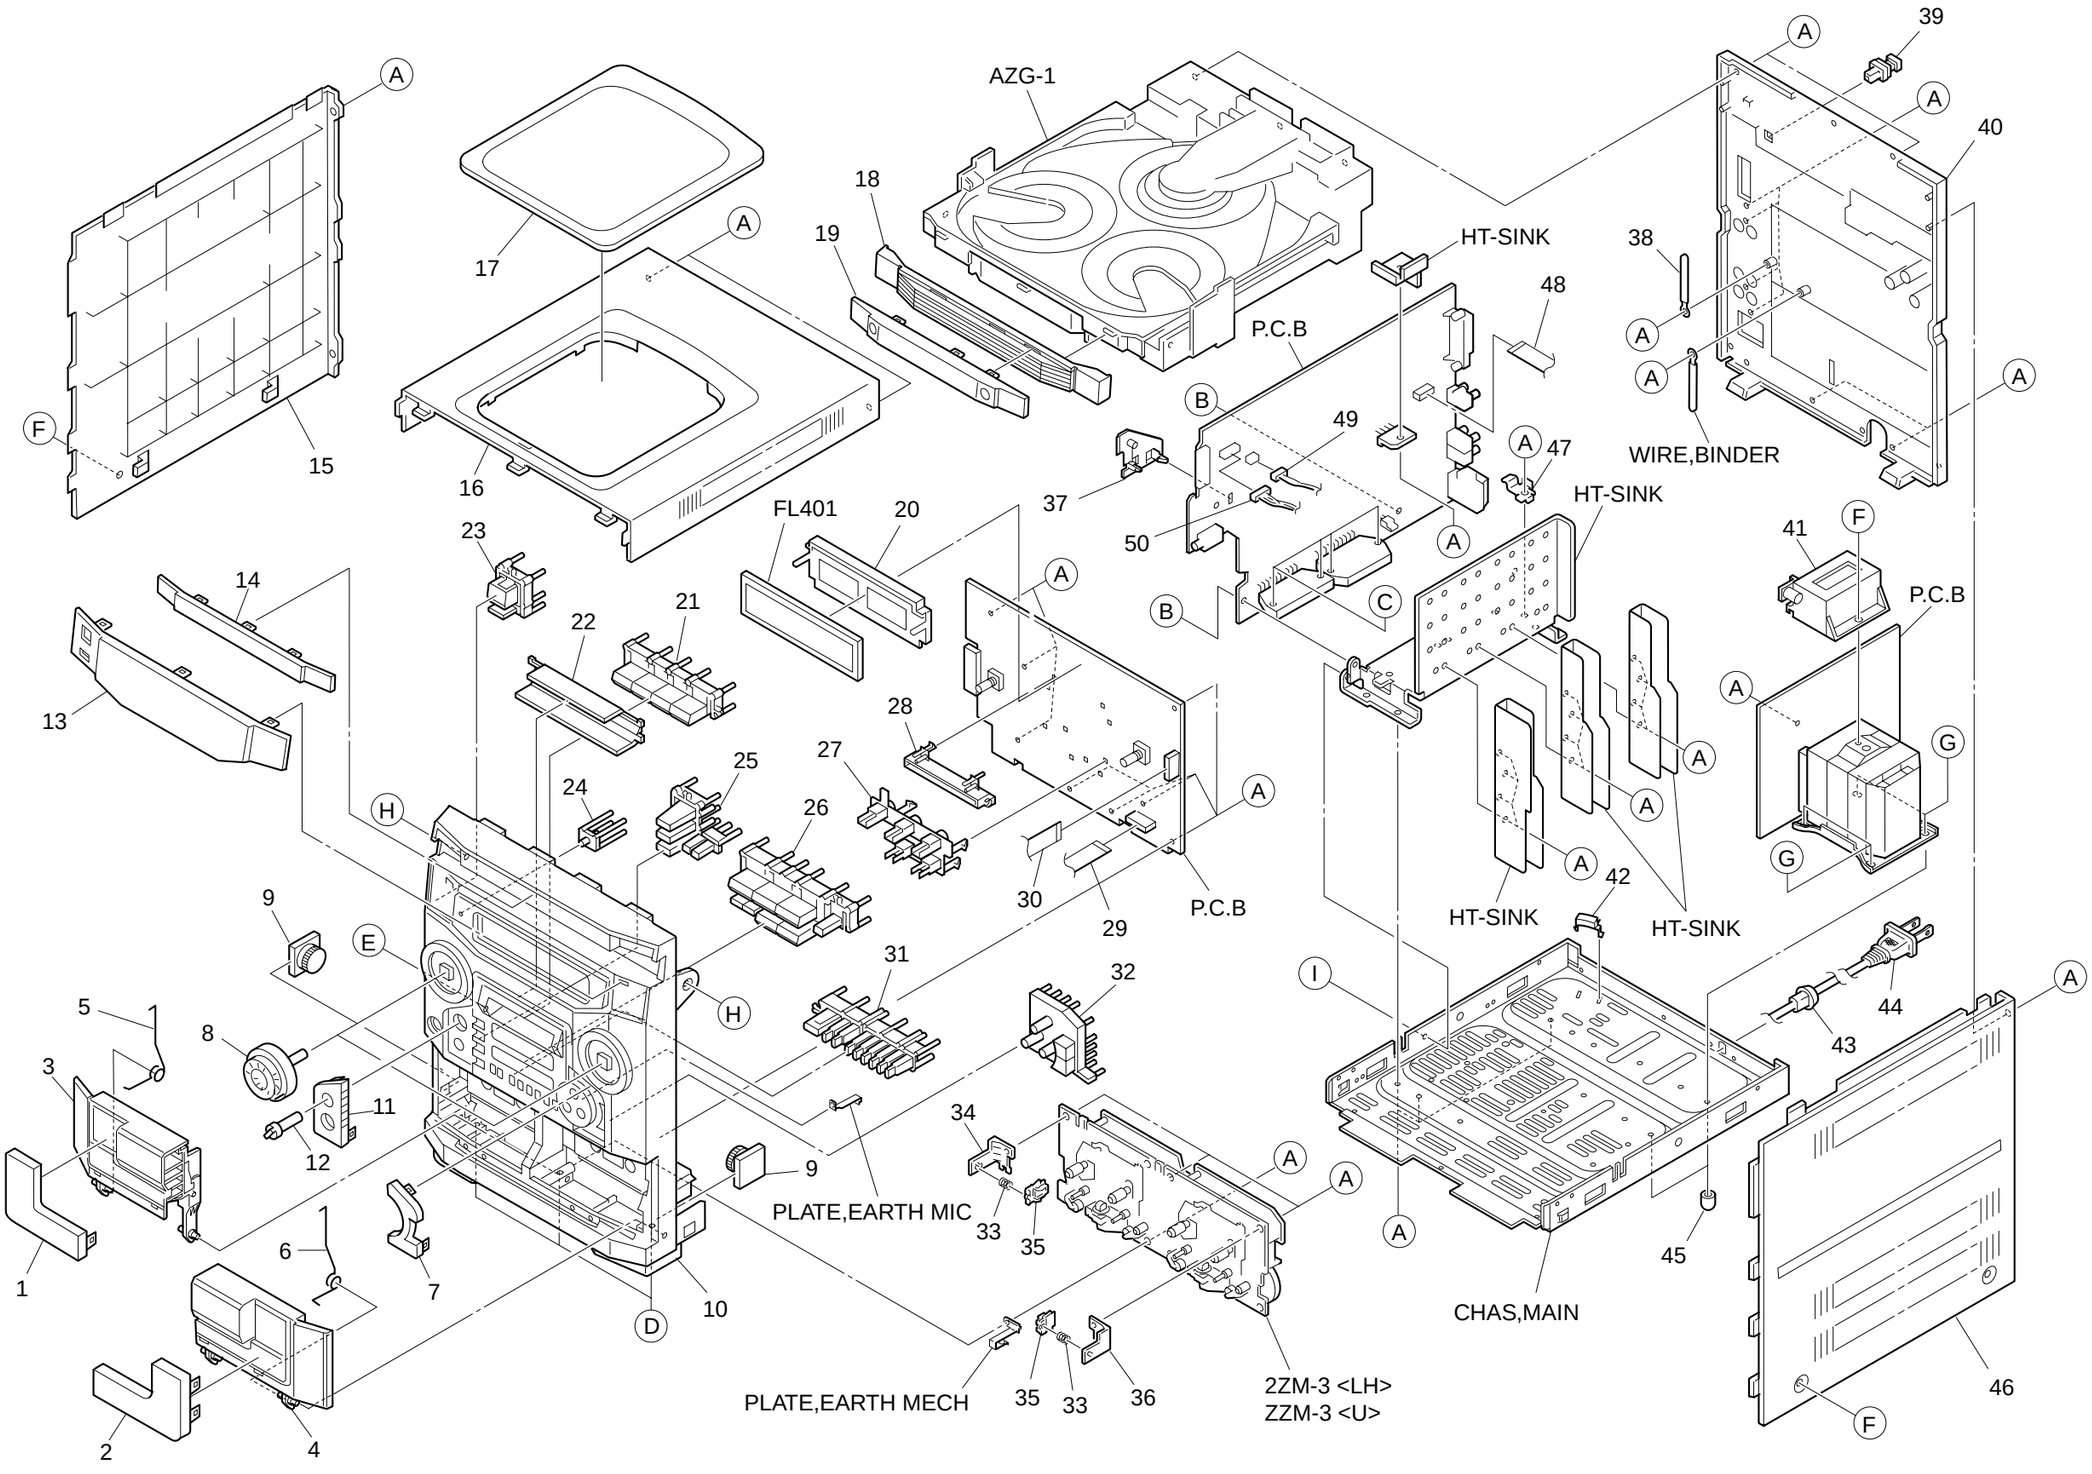

MECHANICAL MAIN PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NFJ-012-010		WINDOW,CASS 1
2	8A-NFJ-013-010		WINDOW,CASS 2
3	8A-NFJ-002-010		BOX,CASS 1 U<U>
3	8A-NFJ-035-010		BOX,CASS 1H<LH>
4	8A-NFJ-003-010		BOX,CASS 2 U<U>
4	8A-NFJ-036-010		BOX,CASS 2H<LH>
5	8A-NF8-207-010		SPR-T,EJECT 1<U>
5	82-NF5-218-010		SPR-T,EJECT 1(SIN)<LH>
6	8A-NF8-208-010		SPR-T,EJECT 2<U>
6	82-NF5-219-010		SPR-T,EJECT 2(SIN)<LH>
7	8A-NFJ-005-010		WINDOW,FR 2
8	8A-NFJ-017-010		KNOB,RTRY JOG
9	8Z-NF6-210-010		DMPR,150 N<LH>
9	8A-NF8-209-010		OIL-DMPR,120<U>
10	8A-NFJ-033-010		CABI,FR H<LH>
10	8A-NFJ-001-010		CABI,FR U<U>
11	8A-NFJ-004-010		WINDOW,FR 1<U>
11	8A-NFJ-006-010		WINDOW,FR 1H<LH>
12	8A-NFJ-026-010		KNOB,RTRY MIC<LH>
13	8A-NFJ-039-010		WINDOW,DISP H<LH>
13	8A-NFJ-011-010		WINDOW,DISP U<U>
14	8A-NFJ-008-010		WINDOW,CD
15	8A-NF8-007-010		PANEL,LEFT V-2
16	8A-NF8-005-010		PANEL,TOP
17	8A-NF8-006-010		WINDOW,TOP
18	8A-NFJ-009-010		PANEL,TRAY
19	8A-NFJ-010-010		WINDOW,TRAY
20	88-NF8-205-010		GUIDE,FL
21	8A-NFJ-018-010		KEY,FUN
22	8A-NFJ-016-010		REFLECTOR,FUN
23	8A-NFJ-014-010		KEY,POWER
24	8A-NFJ-015-010		REFLECTOR,ECO
25	8A-NFJ-019-010		KEY,GEQ
26	8A-NFJ-028-010		KEY,ASSY OPE 1WAY<U>
26	8A-NFJ-029-010		KEY,ASSY OPE REV<LH>
27	8A-NF8-202-010		GUIDE,OPE 1WAY<U>
27	8A-NF8-203-010		GUIDE,OPE REV<LH>
28	8A-NF8-201-010		GUIDE,FUN
29	88-911-101-110		FF-CABLE,11P 1.25<U>
29	88-915-101-110		FF-CABLE.15P 1.25 100MM<LH>
30	88-913-301-110		FF-CABLE,13P-1.25
31	8A-NFJ-030-010		KEY,CD EDIT H<LH>
31	8A-NFJ-025-010		KEY,CD EDIT U<U>
32	8A-NFJ-027-010		KEY,DISC
33	86-NF9-224-010		SPR-C,LOCK
⚠ 34	87-NF4-216-010		HLDR,LOCK 1
35	82-NF5-229-010		PLATE,LOCK(*)
36	87-NF4-217-110		HLDR,LOCK 2
37	8A-NF8-206-010		HLDR,PWB M
38	87-064-185-010		HLDR,WIRE PVC 0.5
39	84-ZG1-245-210		CAP,OPTICAL
40	8A-NFJ-063-010		CABI,REAR LHSC<LH>
40	8A-NFJ-067-010		CABI,REAR USFD<U>
41	8A-DB8-209-010		HLDR,PWB PT
42	87-NF4-221-010		HLDR,CABLE
⚠ 43	87-085-185-010		BUSHING,AC CORD(E) CM-22B<LH>
⚠ 43	87-A91-422-010		BUSHING,AC CORD(U)<U>
⚠ 44	87-A80-092-010		AC CORD ASSY,E BLK SUN FAI<LH>
⚠ 44	87-A80-110-010		AC CORD ASSY,U SPT-2W<U>
45	8Z-NB8-240-010		COVER, PL
46	8A-NF8-008-010		PANEL,RIGHT V-2
47	8A-NF8-205-010		HLDR,IC<U>
47	8A-NF8-216-010		HLDR,IC C<LH>
48	88-906-251-110		FF-CABLE.6P 1.25
49	87-NF6-615-010		CONN ASSY,3P PB<LH>
49	86-ZM3-604-210		CONN ASSY,3P PB<U>
50	87-NF6-616-010		CONN ASSY,8P RPB<LH>
50	86-ZM3-605-110		CONN ASSY,8P -RPB<U>
A	87-067-703-010		BVT2+3-10 W/O SL0T
B	87-NF4-224-010		S-SCREW,IT3B+3-8 CU
C	87-067-581-010		BVT2+3-15 W/O SL0T
D	87-067-688-010		BVTT+3-6
E	87-723-096-410		QT2+3-10 W/O SLOT BLK
F	87-067-641-010		UTT2+3-8 W/O SLOT BLK
G	87-078-191-010		S-SCREW,IT+4-10 SWCH12A
H	87-721-097-410		QT2+3-12 W/O SLOT
I	87-721-096-410		QT2+3-10 W/O SLOT

COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange	GM	Metallic Green
YM	Metallic Yellow	DM	Metallic Orange	PT	Transparent Pink

MECHANISM MAIN PARTS LIST 1/1<LH: 2ZM-3MK2 YPR4NC>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	82-ZM3-335-310	0E	PULLEY,COUPLER M3
2	87-B10-043-010	0E	W-P,0.99-4-0.25 SLT
3	86-ZM1-206-010	0E	BELT,MAIN L
4	82-ZM1-322-010	0E	SPR-T,FR 60
5	82-ZM1-220-210	0E	GEAR,IDLER
6	82-ZM3-616-010	0E	RING MAGNET 4
7	82-ZM3-348-010	0E	LEVER ASSY,PINCH YL<YPR4>
7	82-ZM1-341-210	1A	LVR ASSY,PINCH L2<PR4>
8	82-ZM1-258-210	0E	SPR-T,PINCH L
9	87-A90-821-110	1H	HEAD,RPH HADKH56 FPC
10	82-ZM3-342-010	0E	BELT,SBU MOT 3
11	82-ZM1-338-110	0E	BELT,FR 4
12	09-001-420-010	1A	FLY-WHL,R ASSY
13	82-ZM3-333-310	1A	SLIP DISK ASSY 2
14	82-ZM3-334-010	0E	PW 2.16-6-0.4
15	82-ZM3-306-110	0E	LVR,FR M2
16	82-ZM1-225-210	0E	GEAR,FR
17	82-ZM3-305-310	0E	GEAR,CAM M2(*)
18	82-ZM1-226-010	0E	GEAR,REW
19	82-ZM1-216-510	0E	GEAR,REEL
20	82-ZM1-227-310	0E	LVR,TRIG
21	82-ZM1-265-310	0E	SPR-E,TRIG
22	82-ZM1-245-210	0E	HLDR,IC <YPR4NF><YPR4NC>
22	82-ZM1-245-210	0E	HLDR,IC <PR4NF><PR4NC>
22	82-ZM3-351-010	0E	HLDR,IC 2 <YPR4NM><PR4NM>
23	82-ZM1-344-210	0E	LVR ASSY,PINCH R2<PR4>
23	82-ZM3-343-010	0E	LEVER ASSY,PINCH YR<YPR4>
24	82-ZM1-259-210	0E	SPR-T,PINCH R
25	82-ZM1-234-310	1A	FLY-WHL,L ASSY
26	82-ZM1-237-610	1A	FLY-WHL,R ASSY
27	82-ZM3-339-110	0E	SHAFT,COUPLER N3
28	82-ZM1-255-310	0E	SPR-E,LVR DIR
29	82-ZM1-217-410	0E	REEL TABLE
30	82-ZM1-285-410	0E	SPR-C,BT L
31	82-ZM1-333-210	0E	PLATE,LINK2
32	82-ZM1-222-310	0E	LVR,PLAY(*)
33	82-ZM3-307-010	0E	CUSH-G,DIA3.7-8-3.2
34	87-045-347-010	1H	MOT,SHU2L 70
35	82-ZM1-257-010	0E	SPR-T,CAS
36	82-ZM3-340-010	0E	SH,BELT D2
37	82-ZM1-242-010	0E	LVR,CAS
38	82-ZM1-244-510	0E	SPR-C,BT
39	82-ZM1-243-010	0E	LVR,STOP
40	82-ZM1-240-110	0E	LVR,REC(*)
41	82-ZM1-264-010	0E	LVR,EJECT R
42	82-ZM3-621-110	1B	SOL ASSY 27 KO<YPR4>
42	82-ZM3-627-010	—	SOL ASSY 27 SO<PR4>
43	82-ZM1-241-310	0E	LVR,MC
44	82-ZM1-208-310	0E	HLDR,HEAD
45	87-A90-820-110	1D	HEAD,PH HADKH25 FPC
46	82-ZM1-314-110	0E	PLATE,HEAD
47	82-ZM1-207-910	1A	GUIDE,TAPE
48	82-ZM3-353-010	0E	SPR-T,HEAD 2
49	82-ZM1-210-110	0E	GEAR,H T
50	82-ZM1-219-110	0E	SPR-T,LINK
51	82-ZM1-269-210	0E	SPR-T,BRG
52	82-ZM1-218-010	0E	SPR-E,HB
53	82-ZM1-206-910	1A	CHAS,HEAD
54	82-ZM1-266-310	0E	LVR,DIR
55	82-ZM1-214-010	0E	SPR-T,DIR
56	82-ZM3-221-210	0E	PULLEY,MOT 2M
57	82-ZM3-301-610	1H	CHAS ASSY,M2
58	80-ZM6-243-010	0E	SH 1.75-3.6-0.5 SLT
59	82-ZM3-329-410	0E	BELT,SBU R2
60	82-ZM1-288-010	0E	SH,1.63-3.2-0.5 SLT
A	80-ZM6-207-010	0E	V+1.6-7
B	86-ZM4-206-110	0E	S-SCREW,AZIMUTH L
C	85-ZM3-202-010	0E	S-SCREW,TG
D	82-ZM3-222-010	0E	S-SCREW,SHILD PLATE
E	82-ZM3-318-110	0E	S-SCREW W,MOTOR M2

MECHANISM EXPLODED VIEW 1/1 <LH: 2ZM-3MK2 YPR4NC>

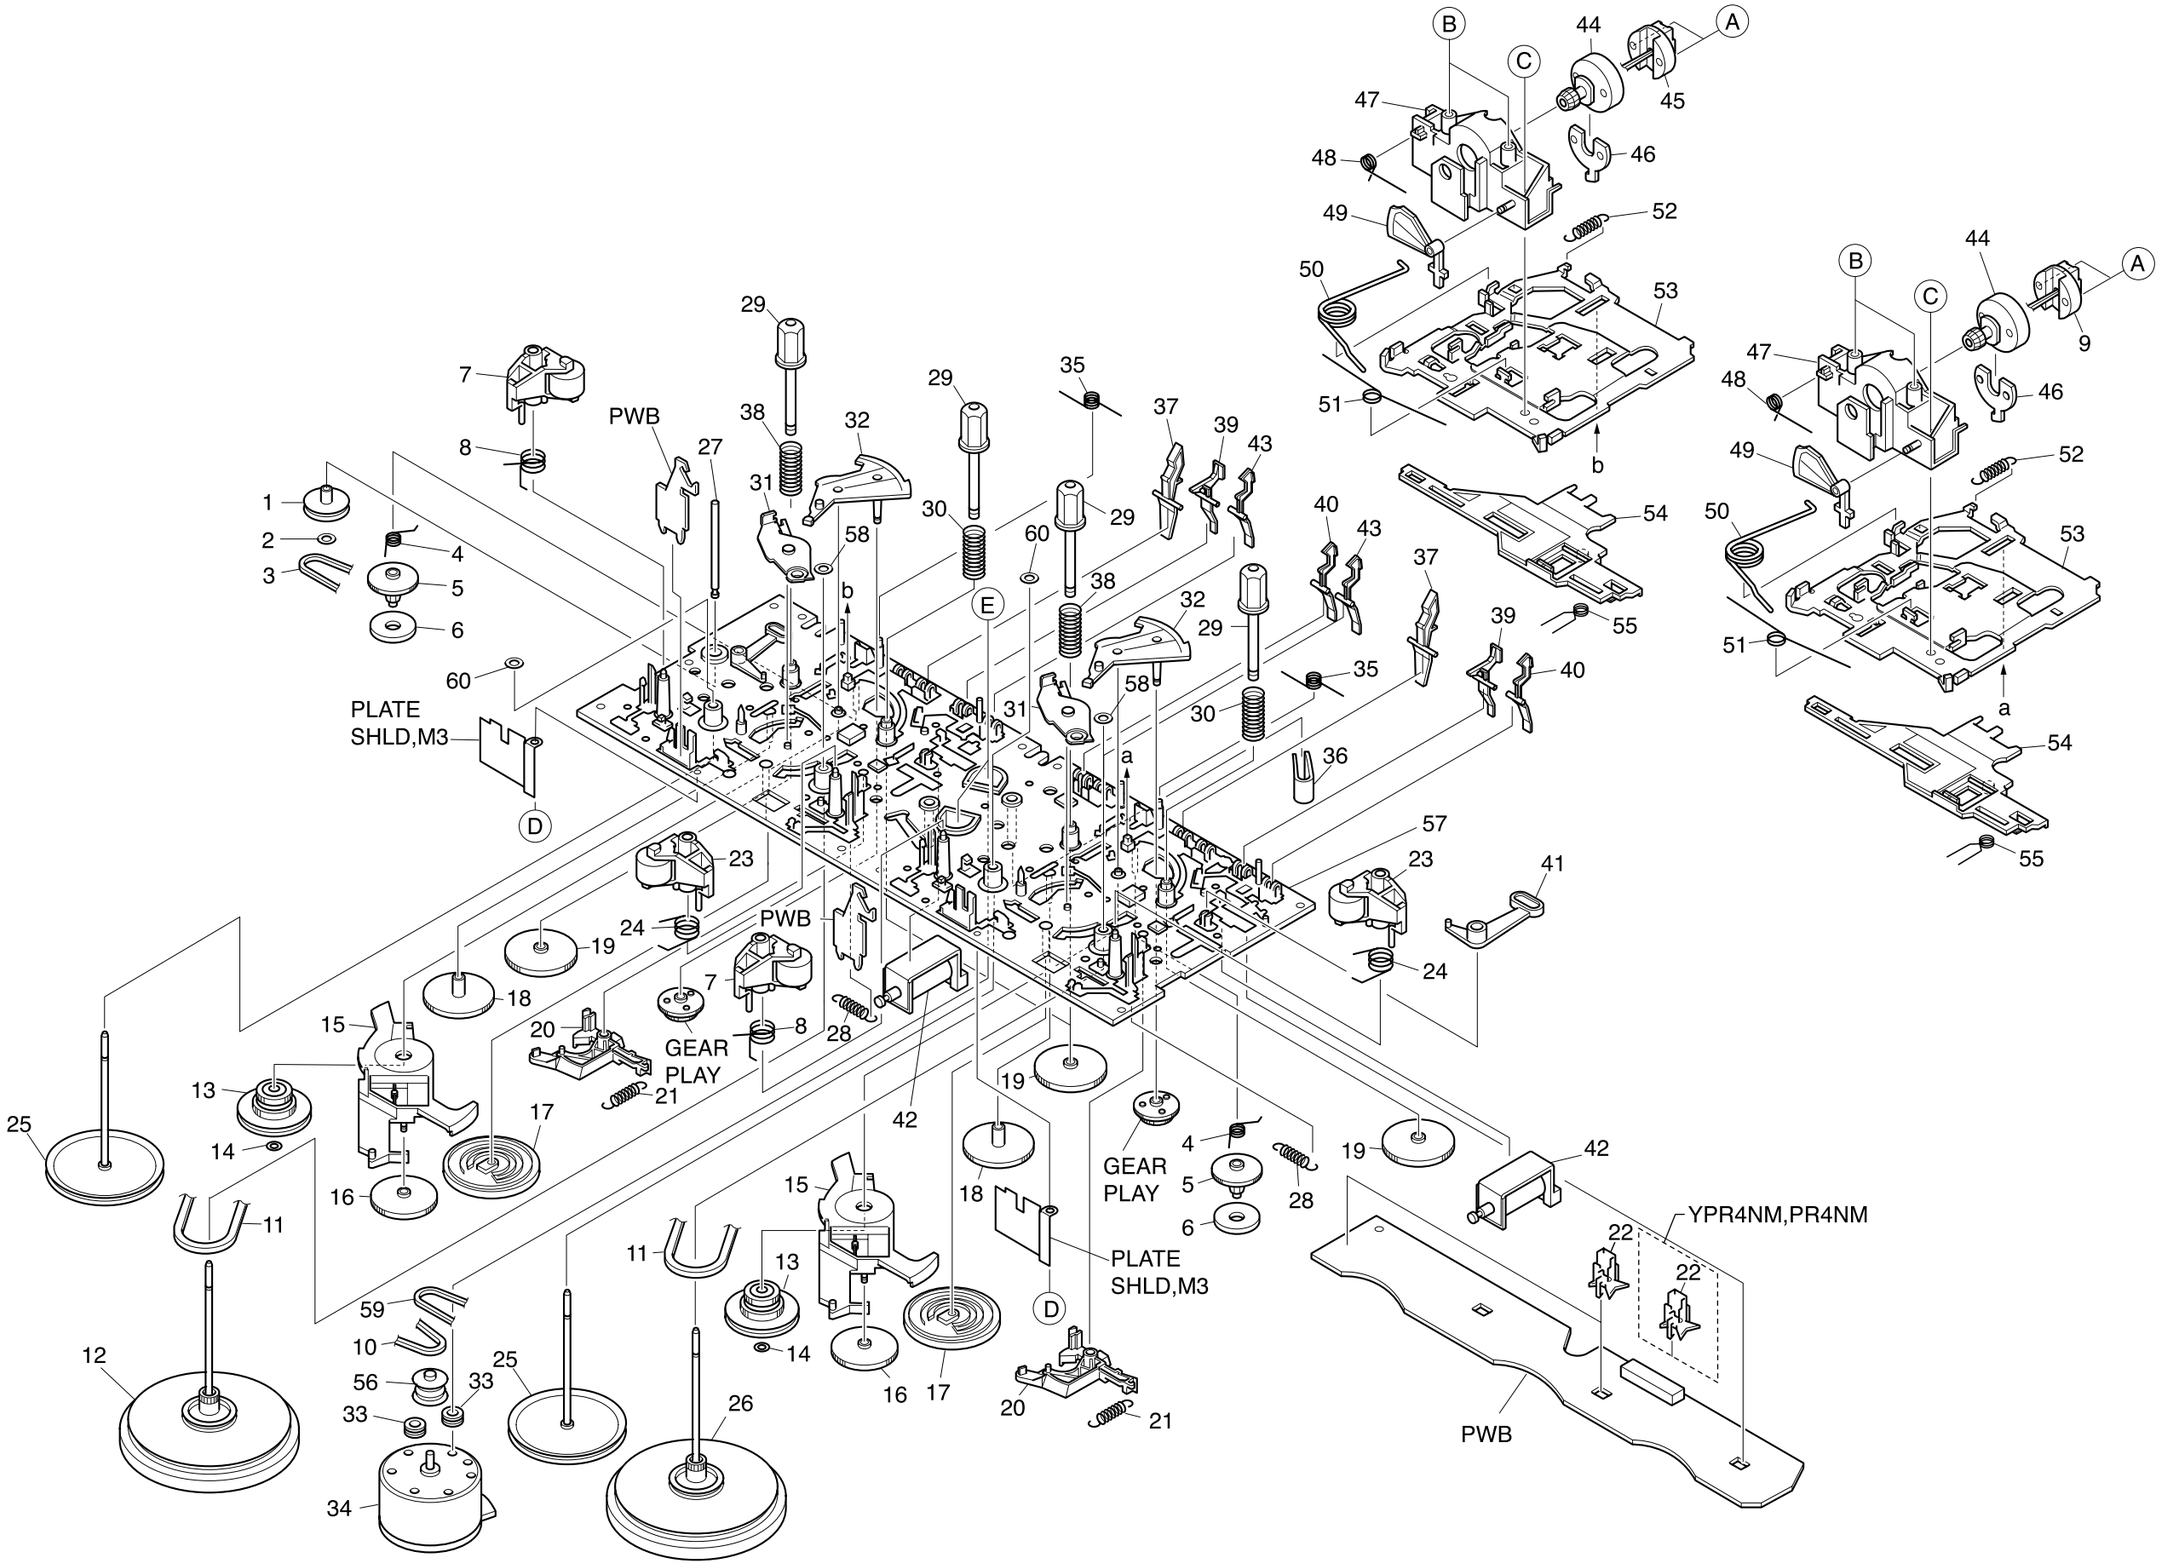

MECHANISM EXPLODED VIEW 1/1 <U: ZZM-3 PR1NF>

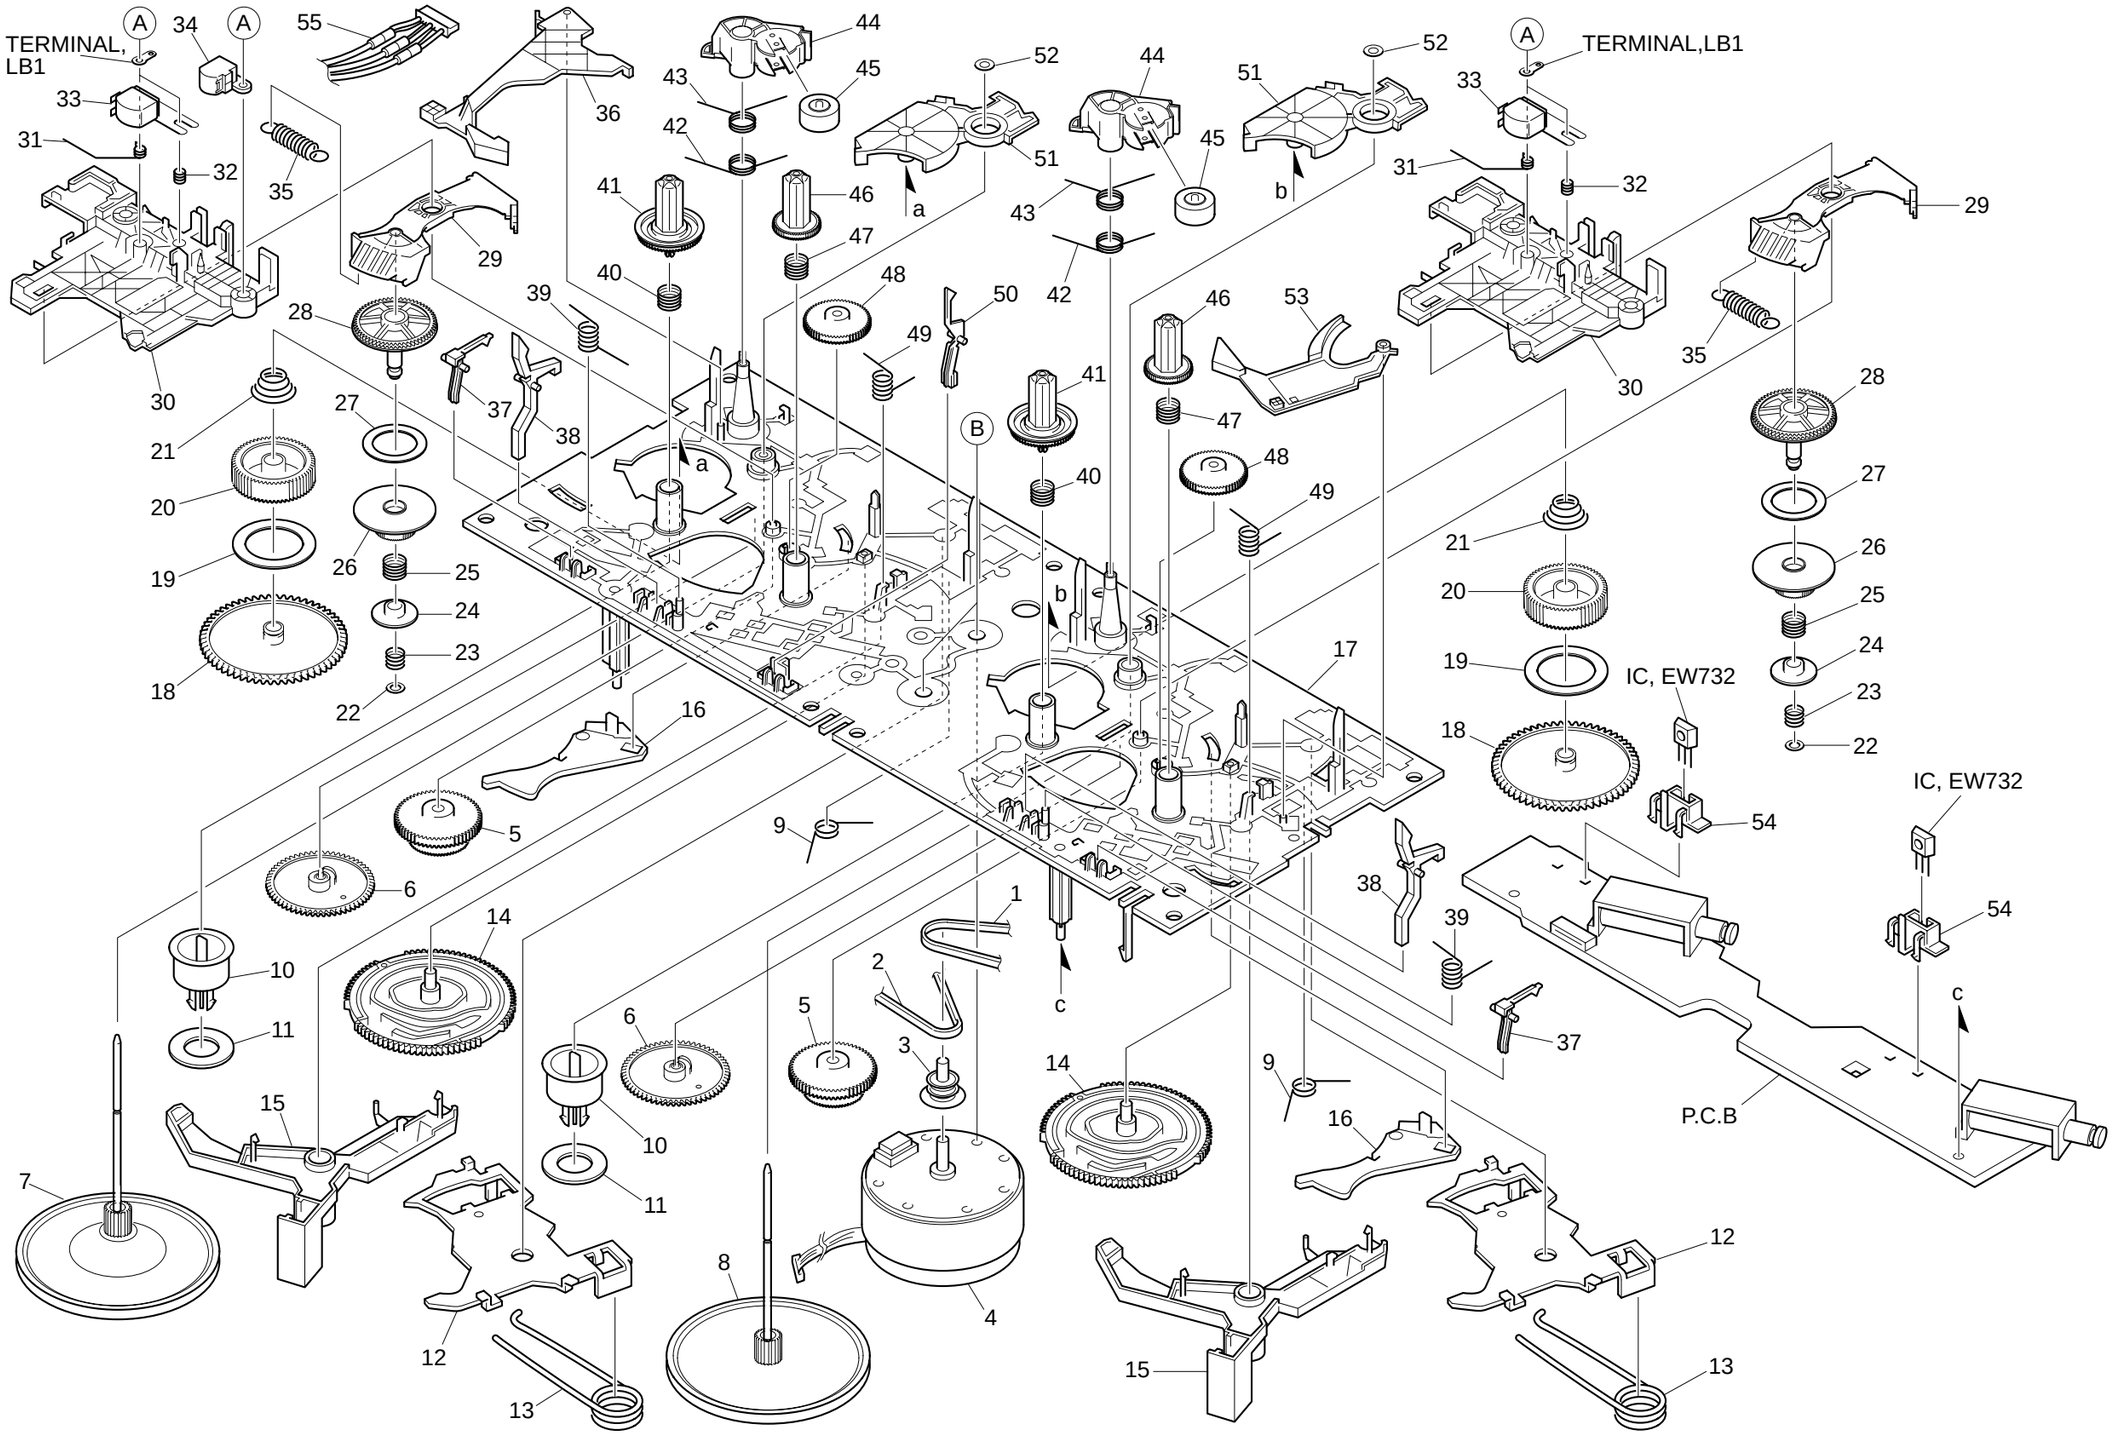

MECHANISM MAIN PARTS LIST 1/1<U: ZZM-3 PR1NF>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8Z-ZM3-227-010	0E	BELT,MAIN M3
2	8Z-ZM3-235-010	0E	BELT,MAIN L
3	8Z-ZM1-235-010	0E	PULLEY,MOT
4	87-045-347-010	1H	MOT,SHU2L 70
5	8Z-ZM1-232-010	0E	GEAR,IDL FF/REW
6	8Z-ZM3-244-010	0E	GEAR,CAM TD20
7	8Z-ZM3-256-010	–	FLY-WHL ASSY,M3 R
8	8Z-ZM3-255-010	–	FLY-WHL ASSY,M3 L
9	8Z-ZM3-231-010	0E	SPR-T,TRIG
10	8Z-ZM3-213-010	0E	CLR,MG
11	82-ZM3-616-010	0E	RING MAGNET 4
12	8Z-ZM3-243-010	0E	LEVER ASSY,HD UP
13	8Z-ZM3-238-010	0E	SPR-T,HD UP
14	8Z-ZM3-219-010	0E	GEAR,CAM M3
15	8Z-ZM3-206-010	0E	LEVER,TRIG
16	8Z-ZM3-209-010	0E	LEVER,CAM FR
17	8Z-ZM3-203-010	1H	CHAS ASSY,M3
18	8Z-ZM1-228-010	0E	GEAR,SLIP T-UP B
19	8Z-ZM1-265-010	0E	FELT,T-UP
20	8Z-ZM1-227-010	0E	GEAR,SLIP T-UP A
21	8Z-ZM1-251-110	0E	SPR-C,T-UP SLIP
22	8Z-ZM1-275-010	0E	W-L,1,47-4-0.25
23	8Z-ZM1-257-010	0E	SPR-C,F/R
24	8Z-ZM1-236-010	0E	CLR,SLIP FF/REW
25	8Z-ZM3-226-010	0E	SPR-C,FR M3
26	8Z-ZM3-250-010	0E	GEAR,SLIP F/R A M3
27	8Z-ZM1-269-010	0E	FELT,FF/REW 2
28	8Z-ZM1-238-110	0E	GEAR,SLIP FF/REW B 2
29	8Z-ZM3-220-010	0E	LEVER,FR M3
30	8Z-ZM3-205-010	0E	LEVER,PLAY M3
31	8Z-ZM3-233-010	0E	SPR-T,BRG M3
32	84-ZM2-227-310	0E	SPR-C,AZIMUTH
33	87-A90-403-110	1B	HEAD,RPH MS15R
34	87-A90-404-010	1B	HEAD,EH LE15B
35	8Z-ZM3-239-010	0E	SPR-E,FR
36	8Z-ZM3-211-010	0E	LEVER,EJECT R
37	8Z-ZM3-225-010	0E	LEVER,STOP
38	8Z-ZM3-221-010	0E	LEVER,CAS
39	8Z-ZM3-234-010	0E	SPR-T,LVR CAS
40	8Z-ZM3-223-010	0E	SPR-C,REEL R M3
41	8Z-ZM1-225-110	0E	GEAR,REEL R
42	8Z-ZM3-240-010	0E	SPR-T,T-UP M3
43	8Z-ZM3-237-010	0E	SPR-T,PINCH M3
44	8Z-ZM3-215-010	0E	LEVER,PINCH M3
45	8Z-ZM1-261-110	0E	ROLLER ASSY,PINCH
46	8Z-ZM1-226-010	0E	GEAR,REEL L
47	8Z-ZM3-222-010	0E	SPR-C,REEL L M3
48	8Z-ZM3-251-010	0E	GEAR,IDL REW M3
49	8Z-ZM3-236-010	0E	SPR-T,PLAY M3
50	82-ZM1-240-110	0E	LVR,REC(*)
51	8Z-ZM3-216-010	0E	LEVER,T-UP M3
52	87-B10-301-010	0E	W-L,1.63-3.2-05 SLIT
53	8Z-ZM3-212-010	0E	LEVER,EJECT L
54	8Z-ZM3-214-010	0E	HLDR,IC
55	86-ZM3-605-110	1B	CONN ASSY,8P -RPB
A	84-ZM2-242-010	0E	S-SCREW,AZ1-2-6.4
B	8Z-ZM2-220-110	0E	V+2.6 ZZM-2

SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

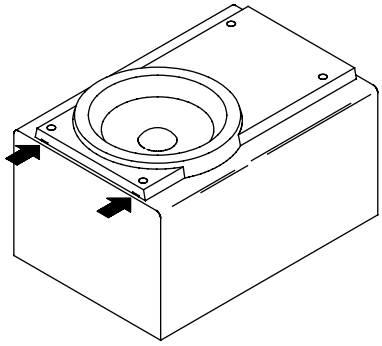

Type.2

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

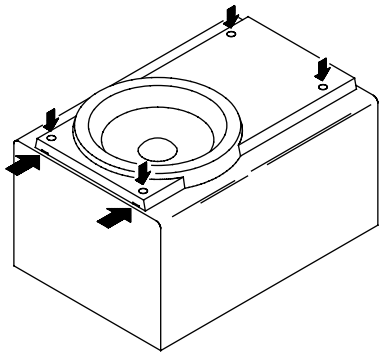

Type.3

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwisedirection while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

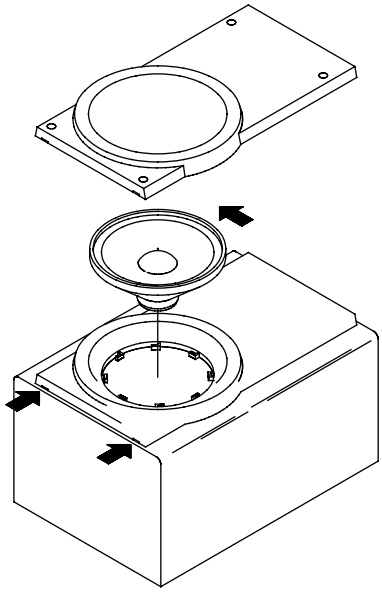

Type.4

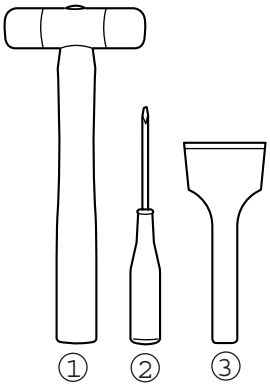

TOOLS

① Plastic head hammer
② (⊖) flat head screwdriver
③ Cut chisel

How to Remove the PANEL, FR

1. Insert the (⊖) flat head screwdriver tip into the gap between the PANEL, FR and the PANEL, SPKR. Tap the head of the (⊖) flat head screwdriver with the plastic hammer head, and create the clearance as shown in Fig-1.

2. Insert the cut chisel in the clearance, and tap the head of the cut chisel with plastic hammer as shown in Fig-2, to remove the PANEL, FR.

3. Place the speaker horizontally. Tap head of the cut chisel with plastic hammer as shown in Fig-3, and remove the PANEL, FR completely.

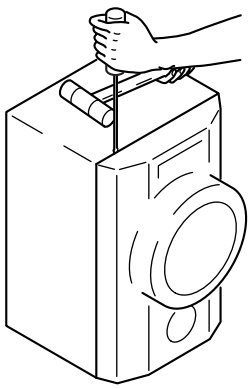

Fig-1

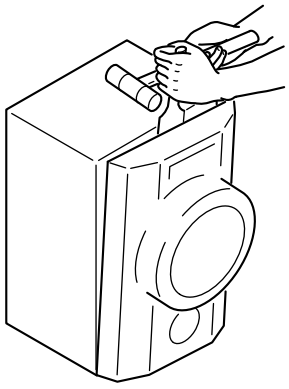

Fig-2

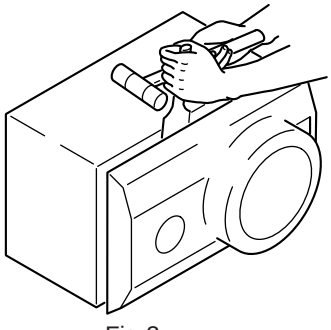

Fig-3

How to Attach the PANEL, FR

Attach the PANEL, FR to the PANEL, SPKR. Tap the four corners of the PANEL, FR with the plastic hammer to fit the PANEL, FR into the PANEL, SPKR completely.

SPEAKER PARTS LIST (SX–WNBL53) <LH>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NS5-001-010		PANEL,FR<YL>
1	8A-NS5-016-010		PANEL,FR U<YS>
2	8A-NS5-017-010		PLATE,NAME B
3	8A-NS5-004-010		PANEL,DUCT
4	8A-NS5-009-010		PROTECTOR,
5	8A-NS5-005-010		GRILLE,FRAME ASSY<YL>
5	8A-NS5-012-010		GRILLE,FRAME ASSY U<YS>
6	8A-NS5-015-010		BADGE,AIWA S35
7	8Z-NSY-003-010		CORD,BUSH
8	88-NS3-029-010		CORD,BUSH L
9	88-NS5-610-010		CORD,SPKR
10	88-NS5-611-010		CORD,SPKR B/L
11	8Z-NSY-608-010		SPKR, CERAMIC ASSY
12	8A-NS8-604-010		SPKR, M 100
13	8Z-NS7-602-010		SPKR, W 160

SPEAKER PARTS LIST (SX–WNAJ53) <U>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NS5-016-010		PANEL,FR U
2	8A-NS5-017-010		PLATE,NAME B
3	8A-NS5-004-010		PANEL,DUCT
4	8A-NS5-009-010		PROTECTOR,
5	8A-NS5-012-010		GRILLE,FRAME ASSY U
6	8A-NS5-015-010		BADGE,AIWA S35
7	8Z-NSY-003-010		CORD,BUSH
8	88-NS3-029-010		CORD,BUSH L
9	88-NS5-610-010		CORD,SPKR
10	88-NS5-611-010		CORD,SPKR B/L
11	8Z-NSY-608-010		SPKR, CERAMIC ASSY
12	8A-NS8-604-010		SPKR, M 100
13	8Z-NS7-602-010		SPKR, W 160

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111

920074 Printed in Singapore